

JOG Operation BOX

JB-401

User's Manual

HOURS
www.hours-shop.com

Notes regarding these materials

- These materials are intended as a reference to assist our customers in the use of the SIGMAKOKI CO., LTD. products that are best suited for the customer's application; they do not convey any license under any intellectual property rights, or any other rights, belonging to SIGMAKOKI CO., LTD. or a third party.

- SIGMAKOKI CO., LTD. assumes no responsibility for any damages, or infringement of any third-party's rights, originating in the use of any product data, diagram, charts, programs, or algorithms contained in these materials.

- All information contained in these materials, including product data, diagrams, charts, programs and algorithms represents the information on our products at the time of publication of these materials, and are subject to change without notice due to product improvements or for other reasons by SIGMAKOKI CO., LTD.

- When using any or all of the information contained in these materials, including product data, diagrams, charts, programs, and algorithm, please be sure to evaluate all the information and products. SIGMAKOKI CO., LTD. assumes no responsibility for any damage, liability or other loss resulting from the information contained herein.

- SIGMAKOKI CO., LTD. products are not designed or manufactured for use in equipment or systems that are used under circumstances which potentially place human life at risk. SIGMAKOKI CO., LTD. products cannot be used for any of these specific purposes, such as apparatus or systems for transportation, vehicular, medical, aerospace, nuclear, or undersea repeater usage.

- The prior written approval of SIGMAKOKI CO., LTD. is required to reprint or reproduce in whole or in part any of these materials.



- If these products or technologies are subject to the Japanese export control restrictions, they must be exported under a license from the Japanese government and cannot be imported into a country other than the approved destination.

Any diversion or re-export contrary to the export control laws and regulations of Japan and/or the country of the product destination is prohibited.




For Your Safety

- Before using this product, read this manual and all warnings or cautions in the documentation provided.
- Only Factory Authorized Personnel should be changes and/or adjust the parts of controller.

The Symbols Used in This Manual


 WARNING	 CAUTION
This symbol marks warnings that should be read and used to prevent serious injury or death.	This symbol indicates where caution should be used to avoid possible injury to yourself or others, or damage to property.

The above indications are used together with the following symbols to indicate the exact nature of the warning or caution.

Examples of Symbols Accompanying Warnings and Cautions	
	△Symbols enclosed in a triangle indicate warnings and cautions. The exact nature of the warning or caution is indicated by the symbol inside (the symbol at left indicates risk of electrocution).
	○Symbols enclosed in a circle mark indicate prohibitions(actions that must not be performed).The exact nature of the prohibition is indicates by the symbol inside or next to the circle mark (the symbol at left indicates that the product must not be disassembled).
	●Symbols inside a black circle mark actions that must be performed to ensure safety. The exact nature of the action that must be performed is indicated by the symbol inside (the symbol at left is used in cases in which the AC adapter must be unplugged to ensure safety).

Symbols on the product

The symbol mark on the product calls your attention. Please refer to the manual, in the case that you operate the part of the symbol mark on the product.

	This symbol labeled on the portion calls your attention.
---	--

Disclaimer of Liability

- ① SIGMAKOKI CO., LTD. does not accept liability for damages resulting from the use of this product or the inability to use this product.
- ② SIGMAKOKI CO., LTD. does not accept liability for damages resulting from the use of this product that deviates from that described in the manual.
- ③ SIGMAKOKI CO., LTD. does not accept liability for damages resulting from the use of this product in extraordinary conditions, including fire, earthquakes, and other acts of God, action by any third party, other accidents, and deliberate or accidental misuse.
- ④ If the equipment is used in a manner not specified by the SIGMAKOKI CO., LTD., the protection provided by the equipment may be impaired.



- Do not use this product in the presence of flammable gas, explosives, or corrosive substances, in areas exposed to high levels of moisture or humidity, in poorly ventilated areas, or near flammable materials.
- Do not connect or check the product while the power is on.
- Installation and connection should be performed only by a qualified technician.
- Do not bend, pull, damage, or modify the power or connecting cables.
- Do not touch the products internal parts.
- Connect the earth terminal to ground.
- Should the product overheat, or should you notice an unusual smell, heat, or unusual noises coming from the product, turn off the power immediately.
- Do not turn on the power in the event that it has received a strong physical shock as the result of a fall or other accident.
- Do not touch the stage while operation.
- Use dry clothes only for cleaning the equipment.

contents

Chapter 1: Before You Begin 6

1-1. Overview 6

1-2. Connecting method 7

Chapter 2: Notes on Use..... 8

2-1. Name of each part..... 8

2-2. Operating method 9

2-3. Fixed pulse setting 12

2-4. Memory Switch and Editing Program setting 13

Chapter 3: Specifications 16

3-1. Specifications..... 16

3-2. Connector pin number and signal 16

3-3. Exterior Dimensions 17

Chapter 1: Before You Begin

1-1. Overview

This product has button type UI. It has display.

It can be connected to our stage controller, SHOT-30* series and SHOT-702/SHOT-702H/PGC-04-U/HSC-103/SHRC-203.

The operation box, connected to the controller via a cable, provides remote operation.

This means that the operation box allows you to work near the motorized stage while checking its behavior even if the controller and the motorized stage are away from each other.

When you use JB-401, you can use when Table1-1 controller version.

Table1-1 Controller version

SHOT-302GS/304GS	Ver.1.20~
SHOT-702	Ver.1.05~
SHOT-702H	Ver.1.00~
PGC-04-U	Ver.1.02~
HSC-103	Ver.1.01~
SHRC-203	Ver.1.00~

This product This contains items such as the following.

- JB-401 1
- User's manual (This document) 1



When you use this product, you need MDR14-CA cable.

1-2. Connecting method

This product is connected to the controller with MDR14-CA cable.

- ① Connect a standard cable (MDR14-CA-*) to the connector on the rear panel of the JB-401.
- ② Connect the cable from the JB-401 to the “JOYSTICK” or “OPTION” of the connector on the front panel of the SHOT-30X series, PGC-04-U and SHRC-203 controller.
(In the case of SHOT-702/SHOT-702H/HSC-103, it becomes the rear panel part.)
- ③ Turn power switch of the controller on.

And confirm that the open message is displayed correctly. If it can not be displayed, reconfirm if connection of cable is done correctly.



Be sure the controller is off when you connect this product. You may not be able to use the buttons and so on on this product if you connect or disconnect either device while the controller is on.

Chapter 2: Notes on Use

2-1. Name of each part


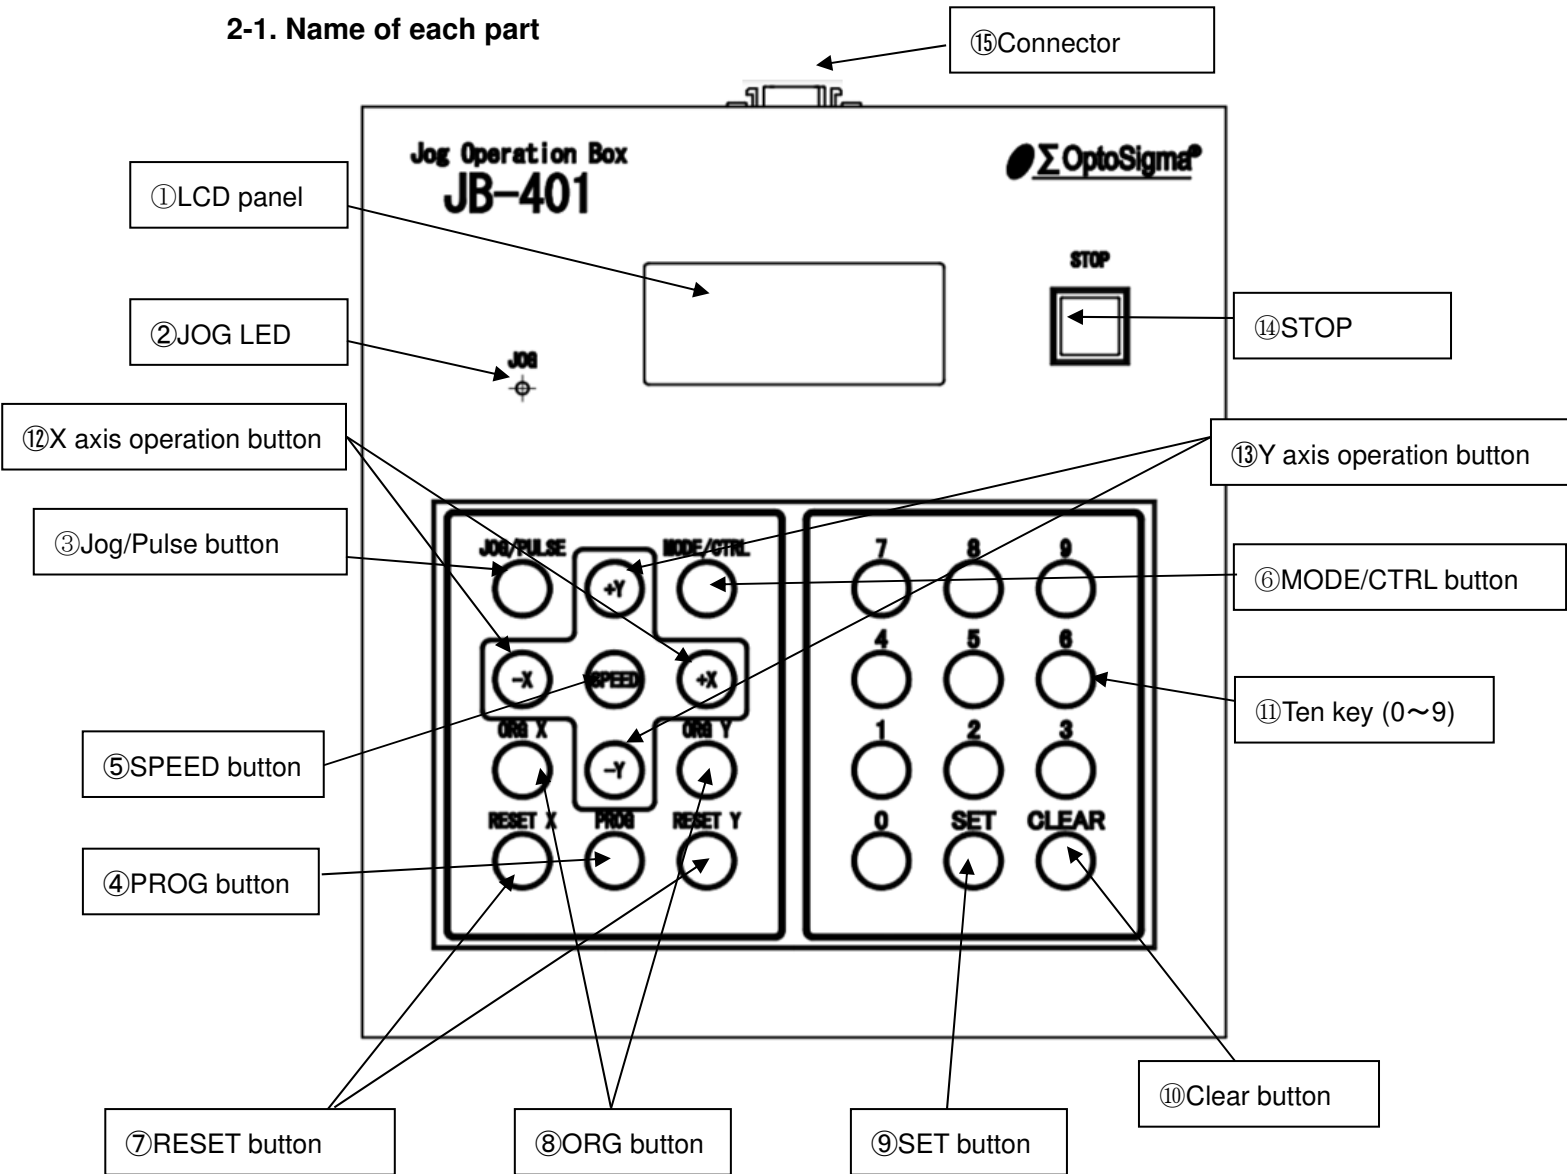


Fig.2-1 Name of each part

2-2. Operating method

① LCD panel

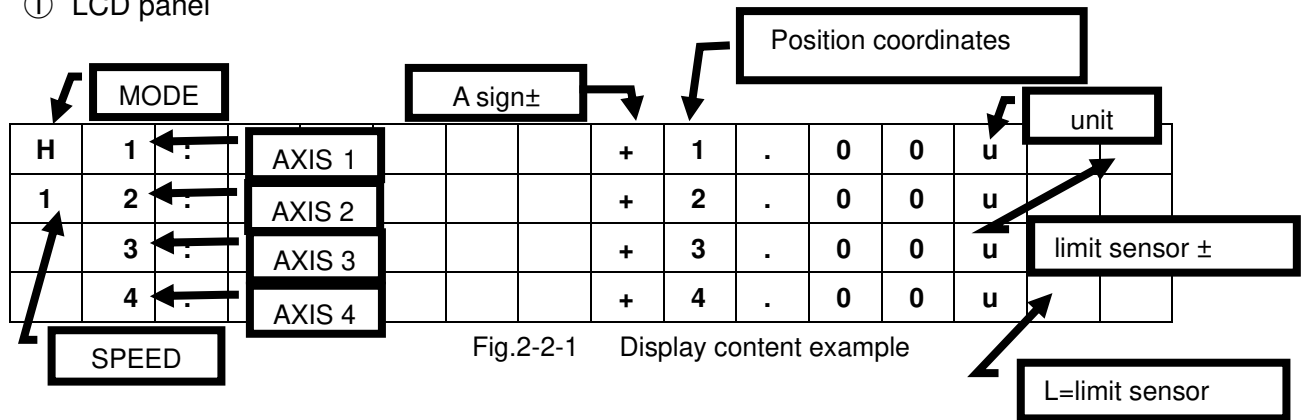

※When you disconnected stage,displayed "+ -".

- unit : p = [pulse]
- u = [μ m]
- d = [$^{\circ}$]
- s = [μ m]

Display the position coordinates for each axis and the operating mode.

Display Digit : 16 digit x 4 lines

② JOG LED

The LED indicator lights up when Jog operation mode and lights off when Fixed pulse mode.change Jog operation mode/ Fixed pulse mode setting every time pressing the 【JOG/Pulse】 button.

NOTE) When you edit Memory Switch or edit program, please set jog operation mode.

③ 【JOG/PULSE】 button

Change Jog operation mode/ Fixed pulse mode setting every time pressing the 【JOG/Pulse】 button. The LED indicator lights up when Jog operation mode and lights off when Fixed pulse mode.

NOTE) When you edit Memory Switch or edit program, please set jog operation mode.

④ 【PROG】 button

Pressing this button will start programmed operation in controller (SHOT-30*).

Pressing 【PROG】 and 【Reset X】 buttons will start No.1 programmed operation.

Pressing 【PROG】 and 【Reset Y】 buttons will start No.2 programmed operation.

NOTE) SHOT-702 and SHOT-702H haven't function of edit program that stored on this product. so, like this button operation can't use.

⑤ 【SPEED】 button

Cycle through "SPEED 1/2/3/4" settings stored on controller's memory switches (1→2→3→4→1 . . .).

⑥ 【MODE/CTRL】 button

Press the 【MODE/CTRL】 button to cycle through operating modes in controller.

Example) Host⇒Manual⇒Remote⇒Teaching⇒Edit⇒Load⇒Test⇒Host. . . .

Refer to a User's Manual of SHOT-302GS/SHOT-304GS/SHRC-203 for various modes.

NOTE) IN SHOT-702/ SHOT-702H/PGC-04-U/HSC-103, the MODE change is invalid.

⑦ 【RESET】 button

【RESET X】 : Reset position coordinates X-axis (AXIS 1) to zero.

【RESET Y】 : Reset position coordinates Y-axis (AXIS 2) to zero.

【MODE/CTRL】 and 【RESET X】 : Reset position coordinates Z-axis (AXIS 3) to zero.

【MODE/CTRL】 and 【RESET Y】 : Reset position coordinates U-axis (AXIS 4) to zero.

【RESET X】 and 【RESET Y】 : Reset position coordinates all-axis to zero.

⑧ 【ORG】 button

【ORG X】 : Position X-axis (AXIS 1) stage at mechanical origin.

【ORG Y】 : Position Y-axis (AXIS 2) stage at mechanical origin.

【MODE/CTRL】 and 【ORG X】 : Position Z-axis (AXIS 3) stage at mechanical origin.

【MODE/CTRL】 and 【ORG Y】 : Position U-axis (AXIS 4) stage at mechanical origin.

【ORG X】 and 【ORG Y】 : Position all-axis stage at mechanical origin.

⑨ 【SET】 button

When would like to finish fixed pulse mode, it'll return to normal display on LCD by press it.

It uses for function of edit the Memory Switch and function of edit program that stored on this product too.

About function of edit the Memory Switch and function of edit program that stored on this product refer to 『2-4』 .

NOTE) SHOT-702, PGC-04-U, HSC-103 and SHRC-203 haven't function of the Memory Switch and function of edit program that stored on this product.

NOTE) SHOT-702H hasn't function of edit program that stored on this product.

⑩ 【CLEAR】 button

When you would like to edit fixed pulse, please use this button.

Number of fixed pulses will clear (0) by press this button.

⑪ Ten key (0~9)

Setting fixed pulse with this button.

Input pulse is 0~99999999.

For fixed pulse mode operation, fixed pulses are selected from 1 to 6.

Example) In fixed pulse operation, when ten key 2 is pressed,

fixed pulse setting 2 pulse can be output.

⑫ 【X axis operation】 button

Enables operation of X-axis (AXIS 1). Pressing of this button continuously moves the stage continuously when Jog pulse mode. Releasing this button stops the stage.

When fixed pulse mode, pressing of this button moves the stage by fixed pulse.

When 【MODE/CTRL】 and 【X axis operation】 buttons simultaneously press, able to operation of Z-axis (AXIS 3).

When fixed pulse mode, pressing of this button moves the stage by fixed pulse.

⑬ 【Y axis operation】 button

Enables operation of Y-axis. Pressing of this button continuously moves the stage continuously when Jog pulse mode. Releasing this button stops the stage.

When fixed pulse mode, pressing of this button moves the stage by fixed pulse.

When 【MODE/CTRL】 and 【Y axis operation】 buttons simultaneously press, able to operation of U-axis (AXIS 4).


⑭ 【STOP】 button

If you press this button, all operating motorized stages will stop.

Refer to about stopped condition on each controller manual.

⑮ Connector

It's a connector for connect between controller and this product.

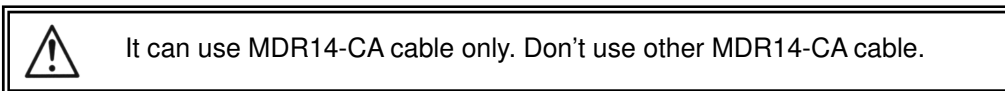

⑯ 【MODE/CTRL】 + 【SET】 button

This product can edit Memory Switch of SHOT-302GS, SHOT-304GS and SHOT-702H.

When using SHOT-302GS or SHOT-304GS, during manual mode, it can change to function of edit the Memory Switch.

About more detail, refer to manual of SHOT-302GS and SHOT-304GS or manual of SHOT-702H.

NOTE) SHOT-702, PGC-04-U, HSC-103, SHRC-203 hasn't function of edit Memory Switch.

- ⑰ **【JOG/PULSE】 + 【MODE/CTRL】** button

It can change to fixed pulse mode.

About fixed pulse mode, refer to bellow.

2-3. Fixed pulse setting

JB-401 has two operating modes Jog operation mode and fixed pulse mode.

In Fixed pulse mode, operate a stage by fixed pulses.

In Fixed pulse, six kinds of 1-6 are set able.

Default Fixed Pulse: Fixed Pulse1:10, Fixed Pulse2:100, Fixed Pulse3:1000,

Fixed Pulse4:2000, Fixed Pulse5:5000, Fixed Pulse6:10000.

[Operations]

- ① Press the **【JOG/PULSE】** and **【MODE/CTRL】** buttons simultaneously.

The fixed pulse settings screen will be displayed. (Fig.2-3-1)

	F	i	x	e	d		P	u	l	s	e	1							
												1	0						

Fig.2-3-1 Fixed pulse setting

- ② Changes of the fixed pulse by the “ten key” (0~9).
- ③ Press the **【SET】** button when changes to settings are complete.
When fixed pulse settings clear, press the **【CLEAR】** button.
- ④ Press the **【SPEED】** button when changes to setting No.(1~6).
No.1⇒No.2⇒No.3⇒No.4⇒No.5⇒No.6⇒No.1

Pressing the **【SET】** button saves changes to settings and returns you to normal display.

2-4. Memory Switch and Editing Program setting

This product can be setting Memory switch (SHOT-302GS/SHOT-304GS/SHOT-702H) and Edit Program in controller (SHOT-302GS/SHOT-304GS).

Memory switch settings can be changed using the buttons on this product.

NOTE) This function is only usable with SHOT-302GS/SHOT-304GS and SHOT-702H.

(*) For more information about memory switch and Edit program, refer to User's manual of SHOT-302GS/SHOT-304GS and SHOT-702H.

NOTE) IN SHOT-702, PGC-04-U, HSC-103, SHRC-203 the Memory switch and program function is invalid.

NOTE) SHOT-702H hasn't function of edit program that stored on this product.

① Changing Memory switch setting

When using SHOT-302GS or SHOT-304GS, if press **【MODE/CTRL】** and **【SET】** at same time, during manual mode (M), it can change to mode of edit Memory Switch.

About how to use button operation on mode of edit Memory Switch, refer to bellow.

Table2-4-1 Memory Switch and Editing Program setting

Button	Function
【+X】	For numeric options, move cursor to right digit
【-X】	For numeric options, move cursor to left digit
【+Y】	Cycle through items in descending order (No.2⇒1⇒86⇒85) (* In case of SHOT-702H (No.45⇒46⇒1⇒2))
【-Y】	Cycle through items in ascending order (No.85⇒86⇒1⇒2) (* In case of SHOT-702H (No.2⇒1⇒46⇒45))
【SET】	①Cycle through options for the current item (or increase the value of numeric options)
	②After changes to settings have been completed, save change to settings and exit
【SPEED】	①Cycle through options for the current item (or decrease the value of numeric options)
	②After changes to settings have been completed, cancel changes to settings and exit
【MODE/CTRL】	①Press to end changes to settings (a confirmation screen will be displayed)
	②Exit confirmation screen and return to memory switch settings screen
【RESET X】 and 【ORG X】 and 【CLEAR】	Restore memory switch settings to factory defaults

NOTE) When editing the memory switch, set the operation mode to the JOG operation mode. (JOG LED is lit)

NOTE) When fixed pulse operation mode, you can't edit.

②Edit mode setting

In Edit mode, you can be recording and selection and Data input from JB-401.

From the Edit mode screen, press the **【SET】** button. The program-number selection screen will appear.

Programs can be edited using the buttons on the JB-401.

Table2-4-2 Edit mode setting

Button	Function
【+X】	Move the edit cursor to the right
【-X】	Move the edit cursor to the left
【+Y】	① Cycle through program numbers in the order No.1⇒2⇒1 ② Scroll through program line numbers in descending order (No.3⇒2⇒1)
【-Y】	① Cycle through program numbers in the order No.1⇒2⇒1 ② Scroll through program line numbers in ascending order (No.1⇒2⇒3)
【SET】	①In the Edit mode start-up screen, press this button to begin editing ②On the confirmation screen, press this button to exit and record changes to settings ③ Make changes to the selected item (numerical data increases)
【SPEED】	①On the confirmation screen, exit without saving changes to settings ② Make changes to the selected item (numerical data decreases)
【MODE/CTRL】	①Press to exit Edit mode(a confirmation screen will be displayed) ②In the confirmation displayed at completion of Edit mode operations, press MODE to return to Edit mode

Chapter 3: Specifications

3-1. Specifications

Display function	LCD 16 digit × 4 lines
Power supply	Supplied from the controller via connection cable
Operating temperature	5~40[°C]
Storage temperature	-20~60[°C]
Altitude	up to 2000[m]
Indoor use only	
Installation category	II
Pollution degree	2
Ambient humidity	20~80[%RH] (no condensation)
External dimensions	178W×195D×41H [mm](excluding projections)
Weight	About 1.0 [kg] However, it does not include cables
Electrostatic discharge	EN61000-4-2(2009) Level 2

3-2. Connector pin number and signal

Table3-2 Connector pin assignment

Pin number	Signal name	Pin number	Signal name
1	SG	8	SG
2	+5V	9	+5V
3	TXD+	10	TXD-
4	RXD+	11	RXD-
5	STOP	12	CONNECT-
6	-	13	-
7	-	14	-

3-3. Exterior Dimensions

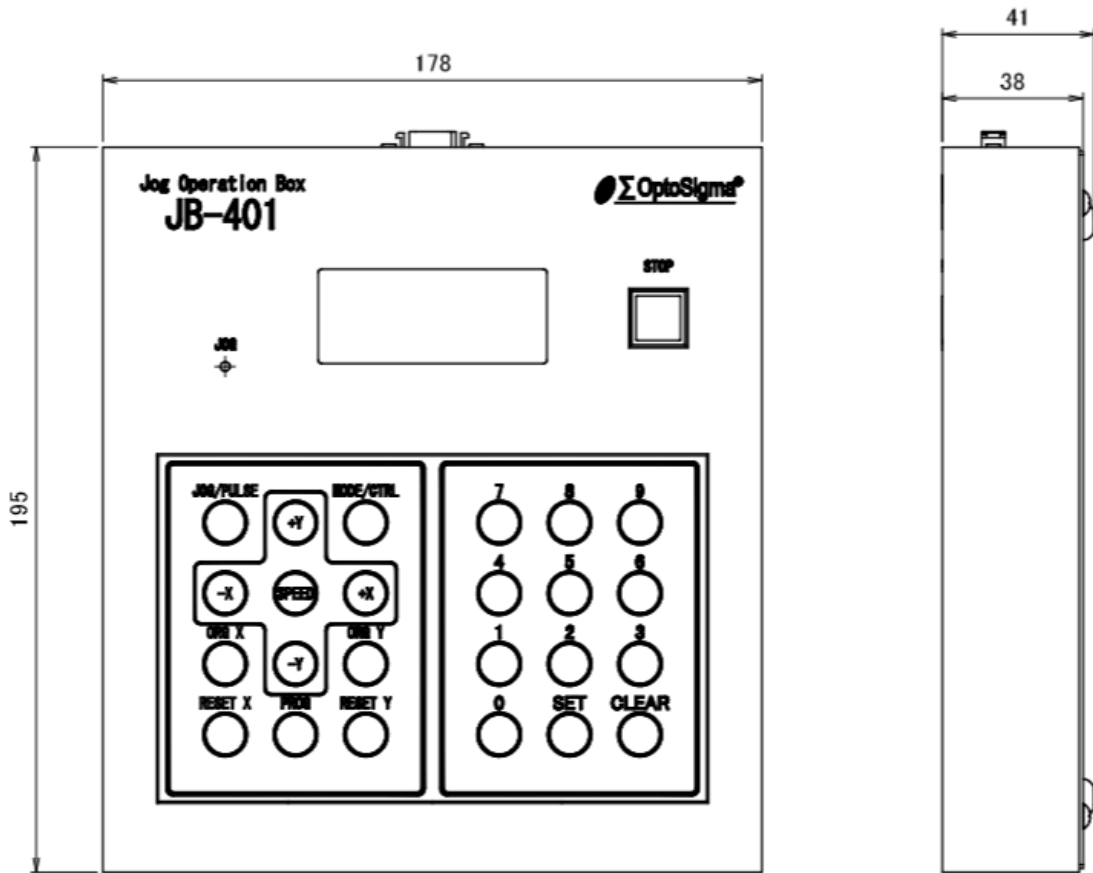


Fig.3-3 Exterior Dimensions