

Auto-Alignment Application

**SGALIGN**

Software User Manual



Ver. 1.0.3

# Table of Contents

1 . Overview .....	4
1 - 1 . Operating Environment .....	4
1 - 2 . Compatible PCI Board .....	4
1 - 3 . File .....	5
2 . Main Screen .....	6
2 - 1 . Menu and Buttons .....	6
2 - 2 . Axis Status Monitor .....	9
3 . Board Setting Screen .....	11
4 . Axis Parameter Setting Screen .....	12
5 . I/O Test Screen .....	16
6 . JOG Operation Screen .....	18
7 . Serial Communication Setting Screen .....	20
8 . TCP/IP Setting Screen .....	22
9 . GP-IB Setting Screen .....	24
1 0 . A/D Setting Screen .....	26
1 1 . Alignment Setting Screen .....	28
1 2 . Alignment Result Screen .....	34
1 3 . Sequence .....	36
1 3 - 1 . Sequence Editing Screen .....	36
1 3 - 2 . Variable List Screen .....	38
1 4 . Key Console .....	40
1 4 - 1 . Display the key console setting screen .....	40
1 4 - 2 . Key Console Setting Screen .....	41
1 4 - 3 . Switching to console key operation mode .....	47
1 4 - 4 . Operation example using console keys .....	49
1 4 - 5 . Usable keys for console key operation .....	54
1 5 . How to start (From power on to sequence start) .....	55

# Introduction

This is the user manual for the SGALIGN control software shipped with the auto-alignment system.

# 1 . Overview

The SGALIGN software is used for operating the alignment system. By use of the auto run program (sequence program) based on various commends and indicators, the multi-axis motorized stages can be automatically operated, and the measurement can be automatically achieved.

## 1 - 1 . Operating Environment

OS : Windows 10 64bit  
CPU : 8th Generation Intel® Core™ i7 Processor 2.0GHz or more (Recommended)  
Memory : 16GB or more  
Storage : SSD or HDD, 500GB or more  
Platform : .NET 6.0

## 1 - 2 . Compatible PCI Board

Motion Control Board : MC8082P (NOVA electronics, INC.) 2 pcs  
<https://www.novaelec.co.jp/MC8082P.html>  
A/D Board : PEX-321316 (Interface Corporation)  
<http://www.interface.co.jp/catalog/prdc.asp?name=pex-321316>  
GPIB Board : PCI-4304 (Interface Corporation)  
<http://www.interface.co.jp/catalog/prdc.asp?name=pci-4304>

### 1 - 3 . File

Executable program is saved in the following folder.

C:¥SIGMAKOKI64

C:¥SIGMAKOKI64	
SGALIGN.exe	Main program
:	Others such as system file

Setting filer is saved in the following folder.

C:¥Users¥[USER NAME]¥Documents¥SGALIGN

名前	
alignment	…Folder contains alignment result files
parameter	…Folder contains setting files
sequence	…Folder contains sequence files
trace	…Folder contains trace log files
BoardList.xml	…Setting file for NOVA board list
JogLast.xml	…Saved status of the JOG interface
setting.config	…①
Variable.json	…File contains sequence variables

① The final status of each interface, and the full path of the various setting file are saved in this file.

## 2. Main Screen

### 2 - 1. Menu and Buttons

Interface Setting

Alignment Setting

Language Setting

Board Setting

I/O Test

Setting

JOG Screen Display

Axis Status Monitor

No.	Axis	Position	Unit	Home	LS+	LS-	Alarm
01	L_Z	0.000000	mm	●	●	●	
02	L_X	0.000000	mm	●	●	●	
03	L_Y	0.000000	mm	●	●	●	
04	L_YQ	0.000000	deg	●	●	●	
05	L_ZQ	0.000000	deg	●	●	●	
06	L_XQ	0.000000	deg	●	●	●	
07	R_Z	-41.597200	mm	●	●	●	
08	R_X	0.000560	mm	●	●	●	
09	R_Y	0.010400	mm	●	●	●	
10	R_YQ	-0.011381	deg	●	●	●	
11	R_ZQ	0.000000	deg	●	●	●	

Sequence File Process

LINE2

開く

運転を開始します。

開始

編集

Jog All Close

機械原点

Emergency Stop (Stop Sequence)

Mechanical Origin

Display Sequence Variables

walk1\_mm 0.3600

Cal\_mem\_1 0.49727355957

Cal\_mem\_2 -1.5084332275

walk2\_mm 1.5

調芯設定確認

Console mode Off

Alignment Setting & Confirming

Console Key Operation On/Off

閉じる


Start Sequence

Sequence Message

Editing Sequence


- <Board> Board setting menu  
Display setting screen for NOVA electronics, INC. board  
(See P.11 for details)
- <Alignment> Alignment setting menu  
Display setting screen for alignment (Same function as clicking <Alignment Setting & Confirming> button)  
(See P.28 for details)
- <I/O> I/O test menu  
Display I/O test screens  
(See P.16 for details)

- <Interface> Interface setting menu  
Display submenu of various interface setting.  
Set various interface.

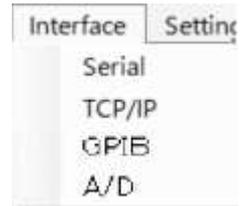

- <Serial> Display setting screen for serial communication  
(See P.20 for details)
- <TCP/IP> Display setting screen for LAN communication  
(See P.22 for details)
- <GPIB> Display setting screen for GP-IB communication  
(See P.24 for details)
- <A/D> Display setting screen for A/D  
(See P.26 for details)

- <Setting> Various setting menu  
Display submenu of various setting

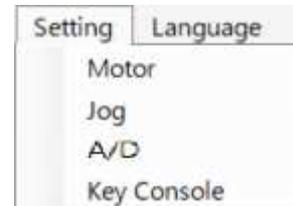

- [Motor] : Display setting screen for axis parameters  
(See P.12 for details)
- [Jog] : Display screen for JOG operation  
(See P.18 for details)
- [A/D] : Display screen for A/D setting  
(See P.26 for details)
- [Key Console] : Display screen for key console setting  
(See P.45 for details)

- <Language> Language setting menu  
Display submenu of language setting



[default] : in default language

[English] : in English

[Japanese] : in Japanese

- <JOG> Display JOG screen  
Display screen for JOG operation  
(See P.18 for details)

- <Mechanical Origin> Button for mechanical origin

Run mechanical origin operation set in axis setting screen.

\* **WARNIN: Please be careful to prevent from possible mechanical interference!**

- <Stop> Emergency stop button & sequence stop button

Immediately stop absolute movement, relative movement, all axis motion in JOG operation.

Immediately stop all axis motion and sequence itself in sequence operation.


Please restart the software after emergency stop operation.

- <Display Sequence Variables>

Up to 4 variables defined by sequence can be displayed.

Double-click name of the variables to select.

Variables can be specified from Type-Variables.

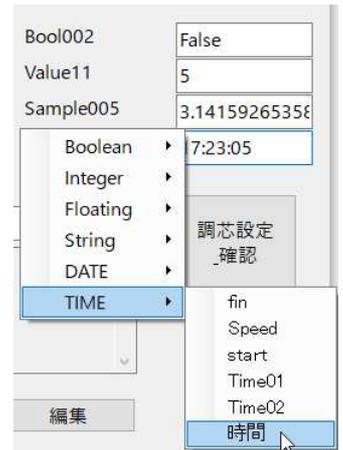

- < Alignment Setting & Confirming> Button

Display alignment setting screen (Same to <Alignment Setting> menu)

(See P.28 for details)

- <Axis Status Monitor>

Display status of all axis in real time.

(See P.9 for details)

- <Sequence File Process>

[Open] Button

Select the sequence file (\*.json) to edit or run.

- <Start> Sequence start button

Start sequence.

- <Edit> Button for sequence creation and edit

Display the sequence creation and edit screen.

(See P.36 for details)

## 2 - 2 . Axis Status Monitor

Display the current status of all axis in real time.

Axis No. & NAME		Axis Availability	Coordinates	Unit	Home Signal	Limit Sensor		Alarm Signal
No.	Axis		Position	Unit	Home	LS+	LS-	Alarm
01	L_X1	●	0	mm	●	●	●	
02	L_X2	●	0	mm	●	●	●	
03	L_Z	●	0	mm	●	●	●	
04	L_Y	●	0	mm	●	●	●	
05	L_ZQ	●	0	deg	●	●	●	
06	L_YQ	●	0	deg	●	●	●	
07	R_X1	●	0	mm	●	●	●	
08	R_X2	●	0	mm	●	●	●	
09	R_Z	●	0	mm	●	●	●	
10	R_Y	●	0	mm	●	●	●	
11	R_YQ	●	0	deg	●	●	●	
12	G_Z	●	0	mm	●	●	●	

- <Axis No. & Name>

Display the axis number and the axis name set in the axis parameter setting screen (Section 4, Page 12).

- <Axis Availability>

In red if the axis set in the axis parameter setting screen (Section 4, Page 12) does not exist or the axis cannot be recognized. In green when the axis is recognized.

- <Coordinates>

Display the coordinates based on the information set in the axis parameter setting screen (Section 4, Page 12). The coordinate "0" expresses the position at software startup or the position after homing. When the motor is running, the coordinates are highlighted in green.

- <Unit>

Display the unit (in mm or deg) of the coordinates set in the axis parameter setting screen (Section 4, Page 12)

- <Home Signal>

Indicates whether home operation has been completed or not. When homing is performed by clicking HOME button or in the sequence program, the light turns green after finishing the home operation.

- <Limit Sensor>

Display the status of the limit sensor in the stages.

In red once the sensor detects the signal.

[LM+] : Limit sensor at "+" side

[LM-] : Limit sensor at "-" side

\*Both [LM+] and [LM-] light in red when driver is powered off.

- <Alarm Signal>

Display when alarm occurs.

Display nothing if no alarm.

### 3. Board Setting Screen


Set the number of the NOVA electronics' board.

If the number of input line is not 2, input "M8082P" into the "BoardName" column of the last "\*" line. Input rotary switch number specified on the NOVA board into "SW1" column.

"SW1" is the board number used by the program.

\*Example

BoardName	SW1
M8082P	0
M8082P	1

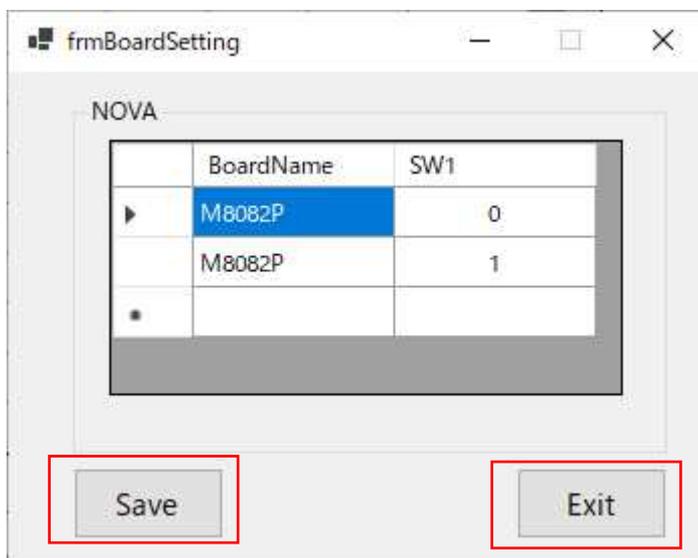

- <Save> button

Click the "Save" button to save the setting after the input.

The setting is always saved in the following folder.

C:\Users\[User Name]\Documents\OPTOSIGMA\SGALIGN\BoardList.xml

- <Exit> button

Click to close the board setting screen.

## 4 . Axis Parameter Setting Screen

**[!] IMPORTANT SETTING FILE RELATED TO THE OPERATION OF THE STAGE. [!]**

**[!] BASICALLY, PLEASE DO NOT EDIT. [!]**

The screenshot shows the 'Axis setting' dialog box with the following sections and labels:

- Axis Setting File:** Points to the file path field containing 'C:\SIGMAKOKI\Par\NoTitle2\_原点復帰用修正.axi'.
- Axis No.:** Points to the 'Axis:' dropdown menu showing 'L\_Z'.
- Enabling Motor:** Points to the checked 'Axis parameter' checkbox.
- Axis Name:** Points to the 'Axis name:' text box containing 'L\_Z'.
- Motor Direction:** Points to the 'MoveDir:' radio buttons for '+' and '-'.
- Motor Setting:** Points to the 'Motor' section containing fields for Resolution (500), Screw lead (1.00000), U/D rate (500), Starting speed (1.00000), and Operating speed (50.00000).
- Motor Driver Setting:** Points to the 'Driver' section containing radio buttons for System (One pulse, Two pulse), Logic (Low, High), and Direction (+L,-H, +H,-L), along with a 'Divide' field (80).
- Stop Action Setting:** Points to the 'Stop mode' section containing radio buttons for Hard Limit and JOG or EMG (Deceleration, Sudden).
- Sensor Logic Setting:** Points to the 'Sensor logic' section containing radio buttons for Limit sensor +, Limit sensor -, and Home sensor (Low, High).
- Display Unit:** Points to the 'Unit:' radio buttons for 'mm' and 'deg'.
- Return-to-Origin Setting:** Points to the 'Home' section containing radio buttons for Direction (CW, CCW), a 'Type' dropdown (Type1), and fields for Order, First speed, Second speed, Offset, and Position.
- Software Limit Setting:** Points to the 'Software limit' section containing fields for Limit + and Limit -.

### • [Axis Setting File]

Display the name of the file which contains axis setting values.

LOAD : Load the axis setting file.

SAVE : Save the axis setting file.

### • [Axis Number]

Select the axis number on the motion control board.

Axis 1 to 8 can be selected.

Display the axis name if the "Axis Name" is saved.



• [Motor Driver Setting]

System : Select the mode of the command pulse that the driver can receive (one-pulse mode or two-pulse mode).

Logic : Select the command pulse logic.

Direction : Select the direction logic for the one-pulse mode.

Select the command pulse logic for two-pulse mode.

Divide : Set micro-step resolution (Must be linked to the driver settings)

• [Stop Action Setting]

Hard Limit : Select the mode for stopping due to hardware limit.

JOG or EMG : Select the mode for stopping when using JOG or emergency stop button.

Deceleration : Deceleration stop

Sudden : Immediate stop

• [Sensor Logic Setting]

Select the logic of the sensor signal

Limit Sensor + : “+” side of the hardware limit


Limit Sensor - : “-” side of the hardware limit

Home Sensor : Home sensor (valid only for the stage equipped with such sensor)

\*Changes depending on the type of the used sensor.

• [Return-to-Origin Setting]

- Home : Check when performing return-to-origin operation.  
If checked, the following items can be edited.
- Direction : Set return-to-origin direction
- Type : Set return-to-origin method (option for other than Type1)  
\*Operation of Type1: moves until reaching the limit sensor at specified direction,  
and then moves to the specified offset position.
- Order : Set return-to-origin order (performed in the order of the small number)
- First speed : Set the first return-to-origin speed
- Second speed : Set the second return-to-origin speed
- Offset : Set the offset position after homing
- Position : Set the initial position. This position is reflected in coordination after homing.  
\*Value display only. The stage does not really move/
- Sensor port : Select the board with the return-to-origin sensor connected.

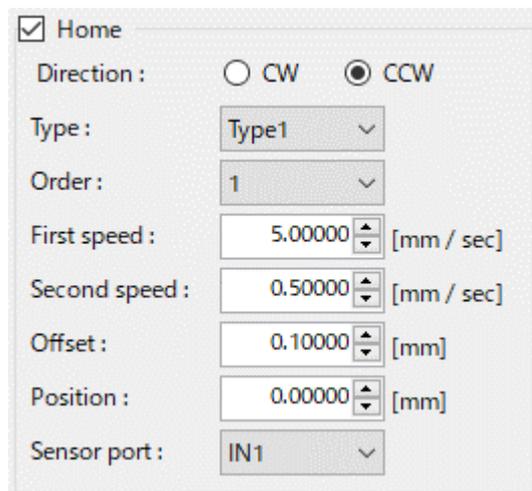


The screenshot shows a dialog box titled "Return-to-Origin Setting" with a checked "Home" checkbox. The settings are as follows:

Direction :	<input type="radio"/> CW	<input checked="" type="radio"/> CCW
Type :	Type1	
Order :	1	
First speed :	5.00000	[mm / sec]
Second speed :	0.50000	[mm / sec]
Offset :	0.10000	[mm]
Position :	0.00000	[mm]
Sensor port :	IN1	

• [Software Limit Setting]

- Software limit : Check to enable software limit and its setting  
If checked, the following items can be edited.
- Limit+ : Set "+" side limit position in given unit
- Limit- : Set "-" side limit position in given unit  
\*"+" and "-" directions reflect the direction specified in [Motor Direction] "MoveDir".

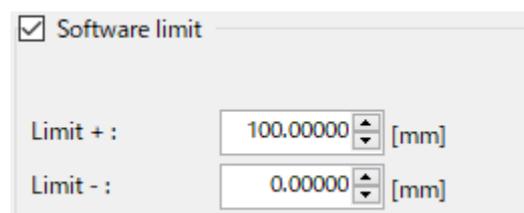

The screenshot shows a dialog box titled "Software Limit Setting" with a checked "Software limit" checkbox. The settings are as follows:

Limit + :	100.00000	[mm]
Limit - :	0.00000	[mm]

## 5. I/O Test Screen

- [Model] Selection  
Select the I/O board part number.

In the “NOVA MC8082P Setting” frame

- [Board No] Selection  
Set NOVA board number used in the test screen.

- [Dio Close] Button  
Close the I/O functions opened in SDB-08 (\*1)

(\*1) SIGMAKOKI 8-axis driver box SDB-08  
[https://jp.optosigma.com/ja\\_jp/sdb-08.html](https://jp.optosigma.com/ja_jp/sdb-08.html)

- [Dio Open] Button  
Open the I/O functions of the SDB-08  
With the given “Board No”.

- [Use Port] Selection  
Select combination of the ports in the SDB-08 which can be used at the same time.  
Either combination “Port 2,3,5,6” or combination “Port1,5,6” is available.

- [Connection Port] Selection  
Because the test shown in this screen is up to 2 connectors (16 Pin),  
The Port selected in “Use Port” is further divided by NOVA ICNo for selection.  
When “Port 1,5,6” in “Use Port” is selected, either “1 (IcNo=0)” or “5,6(IcNo=1)” can be selected.  
In the case of “1 (IcNo=0)”, “Digital Output Write” is 8 Pin because there is 1 connector.

\*”IcNo=x” is the IcNo used in NOVA.

It is possible to change after “Dio Open”.

The screenshot shows the 'frmDioTest' application window. It is divided into several sections:

- DIO Setting:** Contains a 'Model' dropdown set to 'NOVA MC8082P', a 'NOVA MC8082P Setting' frame with a 'Board No' spinner set to 0, and 'Dio Close' and 'Dio Open' buttons. The 'Dio Open' button is currently disabled.
- Use Port:** Radio buttons for 'Port 2,3,5,6' and 'Port 1,5,6'. 'Port 1,5,6' is selected.
- Connection port:** A dropdown menu set to '5,6 (IcNo=1)'.
- Input:** Radio buttons for 'RR2', 'RR4', and 'RR5'. 'RR4' is selected.
- Digital Input:** An 'All Read' button, a grid of 16 input pins (A, I, E, E, E, S, S, S, A, I, E, E, E, S, S, S) with 'ON' and 'OFF' indicators, and a 'Bit read' row. A red box highlights the 'All Read' button and the 'RR' and 'Pin' dropdowns on the right.
- Digital Output Write:** An 'All Write' button, a grid of 16 output pins with 'ON' and 'OFF' indicators, and a 'Bit write' row. A red box highlights the 'All Write' button and the 'IcNo', 'Pin', and 'Value' dropdowns on the right.
- Digital Output Read:** An 'All Read' button, a grid of 16 output pins with 'ON' and 'OFF' indicators, and a 'Bit read' row. A red box highlights the entire section.

Red arrows point from the text 'Specify and read' to the 'All Read' button and 'RR' dropdown, and from 'Specify and write' to the 'All Write' button and 'IcNo', 'Pin', and 'Value' dropdowns.

- [Input] Selection

Set number of "ReadRegister" read by use of "Digital Input".

RR2: Read "Read Register2" of NOVA. Use "MC8000P.Nmc\_ReadReg2" command.

RR4: Read "Read Register4" of NOVA. Use "MC8000P.Nmc\_ReadReg4" command.

RR5: Read "Read Register5" of NOVA. Use "MC8000P.Nmc\_ReadReg5" command.

It is possible to change after "Dio Open".

- [All Read] Button

Read all bits of the port specified in [Connection Port] and all bits of the "Read Register" specified in [Input], and the result is displayed as ON/OFF on a 16-bit dot on the screen.

The name of each bit is same to RR4 and RR5 shown in the following link.

<https://www.novaelec.co.jp/down/file/mc8000p.pdf> (States screen in section 4.1.6 on page 126)

- [Bit read] Button

Read specified bits of the port specified in [Connection Port] and specified bits of the "Read Register" specified in [Input], and the result is displayed as ON/OFF on the dot of the specified bit on the screen.

- [Specify and read]

Read 1-bit by specifying IcNo, ReadRegister, and Pin number.

The indicator becomes green when OFF(0).

With the exceptions of "Board No", the settings in the "NOVA MC8082P Setting" frame are neglected.

- [All Write] Button

Write all bits of the ON/OFF status of the 16-bit dot on the screen to the port specified by [Connection Port].

- [Bit write] Button

Write the ON/OFF status on the screen to the specified bits of the specified port by [Connection Port].

- [Specify and Write]


Write 1-bit by specifying IcNo, Pin number, and Value(ON or OFF).

With the exceptions of "Board No", the settings in the "NOVA MC8082P Setting" frame are neglected.

- [Digital Output Read]

\*Optional function

## 6 . JOG Operation Screen

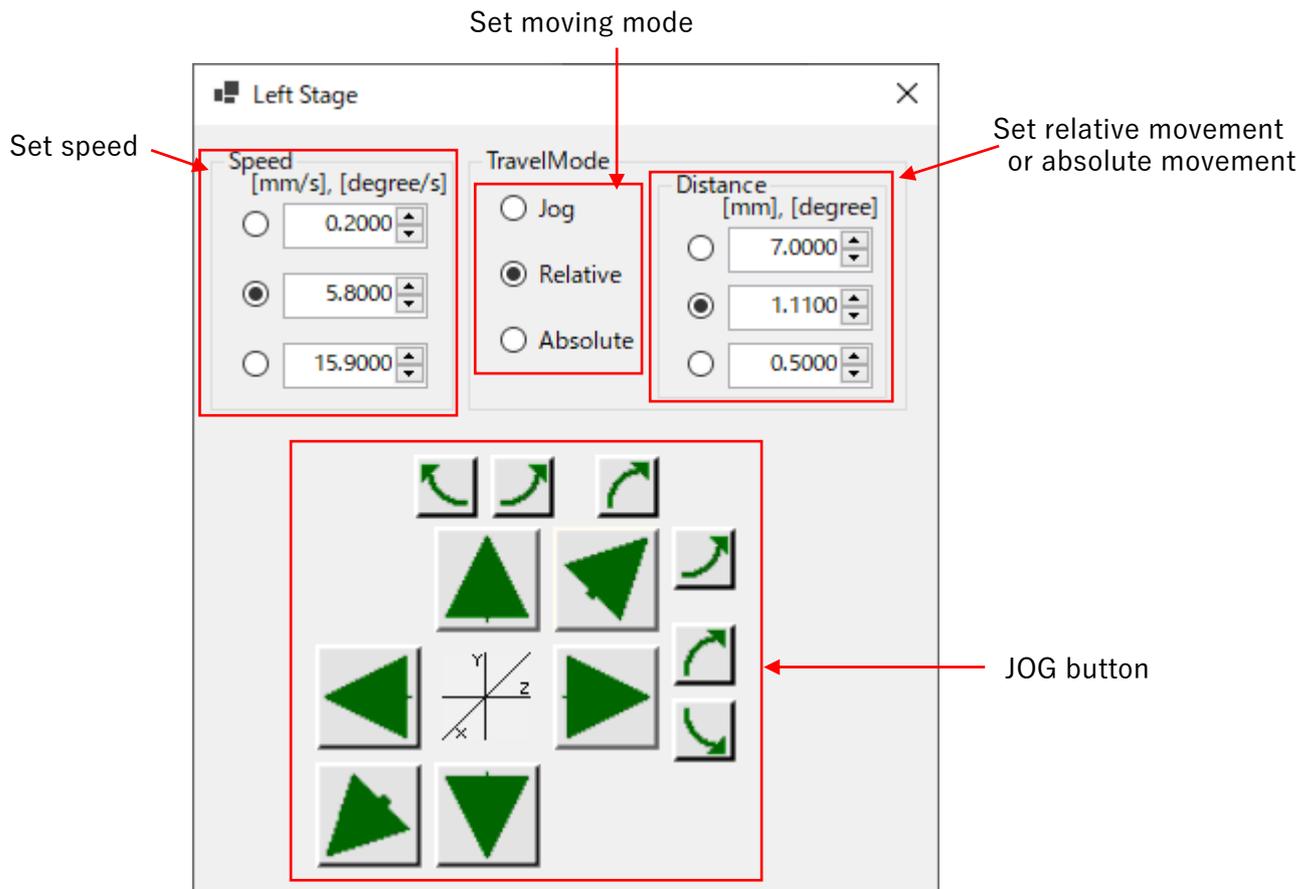

- [Set Speed]

Set speed for JOG movement, relative movement and absolute movement. (Unit: mm/sec or deg/sec)

The input value is the speed. Check left to enable the setting.

3 patterns of speed can be set.

\*Calculated by use of the value set in “Axis Parameter setting screen” (Page 12). Please note that If the parameter is not set correctly, the real speed might be different from the setting speed.

- [Set Moving Mode]

Set JOG movement, relative movement and absolute movement.

Check left to enable the setting.

- [Set relative movement or absolute movement]

In the case of selecting “Relative” in [Set Moving Mode]:

Set relative movement. (Unit: mm or deg)

The input value is movement.

Clicking JOG button to move input distance/angle from the current position.

In the case of selecting “Absolute” in [Set Moving Mode]:

Set absolute movement. (Unit: mm or deg)

Clicking JOG button to move to input position.

- [JOG button]

In the case of selecting “JOG” in [Set Moving Mode]:

When push the JOG button continually, the corresponding axis moves continually (JOG operation).


In the case of selecting “Relative” in [Set Moving Mode]:

When push the JOG button, the corresponding axis moves given distance/angle in given direction.

In the case of selecting “Absolute” in [Set Moving Mode]:

When push the JOG button, the corresponding axis moves to given position independent of direction.

## 7 . Serial Communication Setting Screen

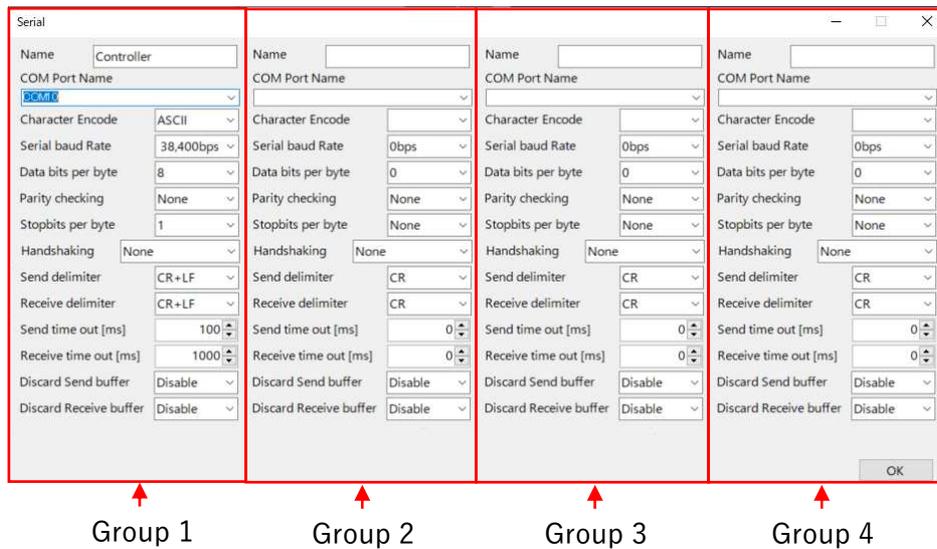

- [Group]  
Support 4 types of communication setting.  
\*Cannot be set in sequence.

Please refer operation manual of the device to be connected to set below.

- [Name]  
Set the name of the device to be connected.

- [Port Name]  
Set COM ports from COM1 to COM16  
(Port number that RS232C can use)

- [Character Encoding]  
Select character code from the combo box.

- [Baud Rate]  
Select baud rate from the combo box.

- [Data Bits]  
Select bit length of the communication data  
from the combo box.

- [Parity]  
Select parity (communication data error monitoring) from the combo box.

- [Stop Bits]

Select the bit length that indicates the end of data from the combo box.

- [handshake]

Select a handshake from the combo box.

- [Send Data Delimiter]

Select send data delimiter from the combo box.

- [Receive Data Delimiter]

Select receive data delimiter from the combo box.

- [Send Timeout Period [ms]]

Input send timeout period in [ms].

- [Receive Timeout Period [ms]]

Input receive timeout period in [ms].

- [Send Buffer Clear]

Select enable/disable of send buffer clear from the combo box.

- [Clear Receive Buffer]

Select enable/disable of receive buffer clear from the combo box.

\*Please refer the RS-232C communication standard for detail.

Name	Controller
COM Port Name	COM10
Character Encode	ASCII
Serial baud Rate	38,400bps
Data bits per byte	8
Parity checking	None
Stopbits per byte	1
Handshaking	None
Send delimiter	CR+LF
Receive delimiter	CR+LF
Send time out [ms]	100
Receive time out [ms]	1000
Discard Send buffer	Disable
Discard Receive buffer	Disable

## 8. TCP/IP Setting Screen

File Management → FILE NAME C:\SIGMAKOKI\Notitle.lan

Setting Storage → Set No: 1 2 3 Load Save

Host IP Address → Host 192.168.0.1

Port Number of Connection → Port 9004 Device HIT-M2 Timeout 0 Delimiter CRLF

Connection Name → Connect Close Status

LAN Connection/Disconnection → Connect Close Status

Command Group →

	Command	SendChk	Response	RcvChk	Send
①	moderemote	<input checked="" type="checkbox"/>		<input type="checkbox"/>	Send
②	modelocal	<input checked="" type="checkbox"/>		<input type="checkbox"/>	Send
③	moderemote	<input checked="" type="checkbox"/>		<input type="checkbox"/>	Send
④	qr	<input checked="" type="checkbox"/>		<input checked="" type="checkbox"/>	Send
⑤	hw	<input checked="" type="checkbox"/>		<input type="checkbox"/>	Send
⑥	L:1	<input checked="" type="checkbox"/>		<input type="checkbox"/>	Send
⑦	L:2	<input checked="" type="checkbox"/>		<input type="checkbox"/>	Send
⑧	be	<input checked="" type="checkbox"/>		<input type="checkbox"/>	Send
⑨	bec:	<input checked="" type="checkbox"/>		<input type="checkbox"/>	Send
⑩		<input type="checkbox"/>		<input type="checkbox"/>	Send

Send Command →

Receive String →

Enable/Disable Send Command →

With/Without Return Value →

Send Button →

Connection Timeout Period →

Connection Delimiter →

LAN Connection Status →

- [File Management]

File Name : Full path of the TCP/IP setting file

Load : Load TCP/IP setting

Save : Save TCP/IP setting

- [Setting Storage]

Memorize 3 types of settings in "Set No." frame.

- [Host IP Address]

Set IP address of the connection device.

However, the IP address of the LAN adapter of the control PC should be fixed but not DHCP. The subnet mask and the IP address should be set properly.

- [Port Number of Connection]

Set proper port number of the connected device.

Please refer device manual for detail.

- [Connection Name]

Name of the connected device.

- [Connection Timeout Period]

Set connection timeout period in second for LAN connection.

- [Connection Delimiter]

Select delimiter attached to the LAN send string.

- [LAN Connection/Disconnection]

Click "Connection" button to make LAN connection to specified IP address and port.

If the connection is established within the "Connection Timeout Period," the "LAN Connection Status" turns green.

Click the "Disconnect" button to disconnect the LAN connection. The "LAN Connection Status" turns transparent.

- [LAN Connection Status]

When the LAN connection is successfully established, it turns green and remains green during the connection.

When the LAN connection is disconnected, it turns transparent.

- [Command Group]

A group of send line, enable/disable send command, enable/disable receive data.

- [Send Command]

Input the command which will be sent to the connected device.

- [Enable/Disable Send Command]

Check or uncheck to enable or disable sending the input command to the device.

- [With/Without Return Value]

Check when there is returned value corresponding to the send command.


- [Receive String]

Display the received string.

- [Send Button]

Performing test for sending and receiving line by line.

## 9. GP-IB Setting Screen

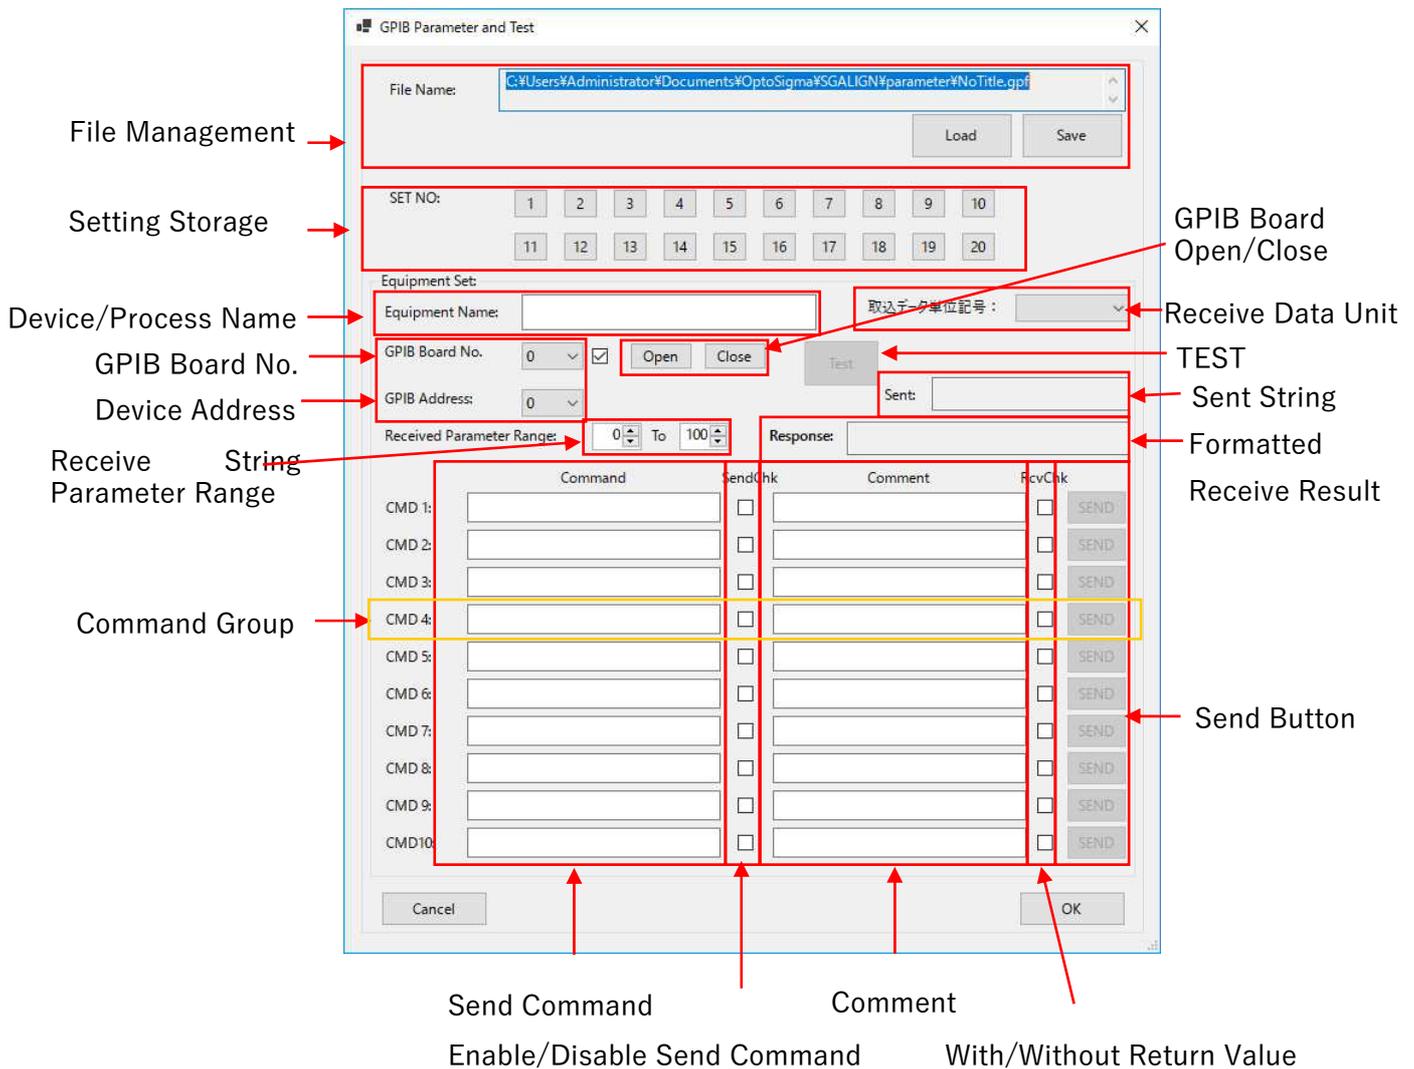

- [File Management]

File Name : Full path of the GPIB setting file

Load : Load GPIB setting

Save : Save GPIB setting

- [Setting Storage]

Memorize 20 types of settings in "Device Setting" frame.

- [Device/Process Name]

Device or process name that the setting will be sent to.

- [Receive Data Unit]

Set unit of the received data. The setting cannot be saved to the setting file.

- [GPIB Board No.]

Select GPIB board.

- [Device Address]

Select GPIB device address.

- [GPIB Board Open/Close]

Click "Open" to open the GPIB board with the specified GPIB board number.

If the GPIB board is successfully opened, the "Send" button is enabled.

Click "Close" to close the GPIB board. The "Send" button is disabled.

- [Receive String Parameter Range]

The string at the specified position is extracted from the received string and displayed in the [Formatted Receive Result].

The start position of the string to be extracted is given before "To". The first character position is considered to be 0.

After "To" is the number of strings to be extracted from the start position of the string.

- [Command Group]

A group of send line, enable/disable send command, enable/disable receive data.

- [Send Command]

Input the command which will be sent to the device specified by GPIB board number and device address.

- [Enable/Disable Send Command]

Check or uncheck to enable or disable sending the input command to the device.

- [With/Without Return Value]

Check when there is returned value corresponding to the send command.

- [Comment]

Show the meaning of command. (The comment is not sent to the device)

- [Send Button]

Performing test for sending and receiving line by line.

- [Test]

Send and receive a group of all 10 lines at once. (It is performed in order from the top)

- [Sent String]

Display the most recently sent command string.

- [Formatted Receive Result]

Display the string extracted from the received string according to the conditions in [Receive String Parameter Range].

## 1 0 . A/D Setting Screen

The screenshot shows the 'A/D Setting' dialog box. It is divided into several sections:

- File Management:** Contains a 'File Name' field with the path 'C:\Users\Administrator\Documents\OptoSigma\SGALIGN\parameter\NoTitle.adf', a 'Load' button, and a 'Save' button.
- Setting Storage:** A grid of 20 buttons labeled 'SET No.' from 1 to 20. Button 1 is highlighted.
- Board:** Includes a 'Board' dropdown menu set to '0', a 'Board Model' text field containing '3155', a 'Board Bits' text field containing '16', and a 'Voltage Range' dropdown menu set to '-10'.
- A/D Channel:** A grid of 16 buttons labeled 'Ch 1' through 'Ch 16'. 'Ch 1' is highlighted.
- Setting:** Contains a slope formula field with '0.000000' in a yellow box, followed by '= [ ] × ( AD Data + [ ] ) + [ ]'. Below this is an 'Average' dropdown set to '1' and a 'Start' button.
- Buttons:** 'OK' and 'Cancel' buttons are located at the bottom of the dialog.

- [File Management]

File Name : Full path of the A/D setting file

Load : Load A/D setting

Import : Load A/D setting using current file name

Save : Save A/D setting

- [Setting Storage]

Memorize 20 types of settings in board frame.

- [Board Number]

Select board number of the A/D board.

- [Board Model]

Display the A/D board name corresponding to the selected board number.

- [Board Bits]

Display the input and output bit numbers of the A/D board selected in [Board Number].

- [Voltage Range]

Select the input voltage range of the A.D board.

- [A/D Channel]

Select the channel in A/D board.

- [Slope Setting]

The slope of the data input from the A/D board can be corrected.

Slope Correction Result = Slope × (AD\_DATA + Digital Offset Value) + Offset Value

The analog values are acquired and averaged over the number of runs specified in "Average".

- [Test Button]

Start or stop the analog value acquisition test.

Once the "Start" button is pressed, the analog value acquisition is started and the button name becomes "Stop".

Once the "Stop" button is pressed, the analog value acquisition is stopped and the button name becomes "Start".

The acquired values are displayed in real time on the left side of the slope expression.

# 1 1 . Alignment Setting Screen

Set alignment motion.

Operation

File Management

Alignment Method

Setting Storage

Axis Setting

Operation Setting

Input Setting

The screenshot shows the 'Alignment' dialog box with the following sections highlighted by red boxes:

- File Management:** File path, Load, and Save buttons.
- Alignment Method:** Selection buttons for SPIRAL, 1 LINE, 2 LINE, 3 LINE, NelderMead, and RASTER.
- Setting Storage:** A grid of buttons labeled No. 1 through No. 20, and a LINK button.
- Axis Setting:** Six panels for 1 Axis through 6 Axis, each with Axis, Speed, and Pitch settings.
- Operation Setting:** RANGE, DIRECTION, WAIT, END METHOD, and LEVEL settings.
- Input Setting:** Input type, Set No., and Averaging Count settings.

## • [File Management]

File Name : Full path of the alignment setting file

Load : Load alignment setting

Save : Save alignment setting

## • [Alignment Method]

SPIRAL : Detect by moving in a spiral outward from the current position.

1LINE : Detect along one specified axis.

2LINE : Detect along specified 1st axis and then specified 2nd axis.

3LINE : Detect along specified 1st axis, 2nd axis and 3rd axis in turn.

NelderMead : Using the NelderMead method, detect by moving to the predicted next peak position.

RASTER : Detect in serpentine motion.

## • [Setting Storage] No.1~No.20

Memorize 20 types of settings for each alignment method.

- [Axis Setting] 1Axis, 2Axis, 3Axis

Set axis for alignment.

- [Axis] : Select the axis
- [Speed] : Set moving speed
- [Pitch] : Set moving interval

- [Operation Setting] Condition

Set Detecting range, Detecting Method, Detecting WAIT and End position.

[RANGE] : Detecting range (Valid for SPIRAL, RASTER and LINE alignment only)

Detecting points are  $(\text{Range} * 2 + 1)^2$  for SPIRAL.

For example: When inputting "5", detecting points are  $(5 * 2 + 1)^2 = 121$ .

Detecting points are input value for RASTER, 1LINE, 2LINE and 3LINE.

For example: When inputting "5 \* 3", detecting points are  $5 * 3 = 15$ .

[DIRECTION] : Detecting direction (With exception of SPIRAL and NelderMead)

0 -> - Detect from starting position to minus direction.

0 -> + Detect from starting position to plus direction.

0 -> - -> + Move to half of the detection range from starting position to minus direction, and then detect along plus direction.

\*In case of RASTER, valid for 1st axis.

[WAIT] : Detecting WAIT

Set the waiting time for starting power measurement after moving to measurement point. (Unit: msec)

[END METHOD] : End condition


MAX POWER Move to peak position after detection

LEVEL STOP Stop once the detected data is within the range between LEVEL1 and LEVEL2.

PEAK SEARCH \*Optional function. Not available for standard product.

GRAVITY Set peak to be 100% after detection and move to the center of gravity cut off by the value (%) of LEVEL1.

CENTER Return to the starting position after detection.

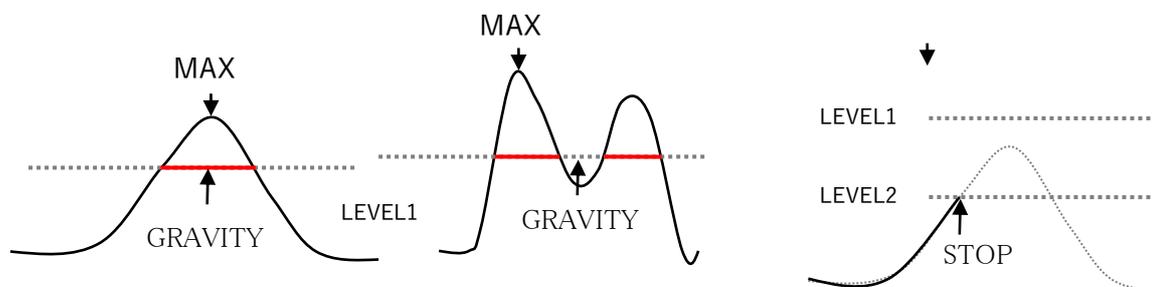

[LEVEL1] Comparison value for LEVEL STOP and GRAVITY.

[LEVEL2] Comparison value for LEVEL STOP.

\*Unit changes depending on the measurement data.

GRAVITY: %

LEVEL STOP: Analog voltage, or unit specified by connected device.

- [Operation Setting] Condition (For NelderMead only)

Set Detecting range, Detecting Method, Detecting WAIT and End position.

Condition

RANGE [mm, degree]

1Axis	4Axis
0.0005c	0.0000c
2Axis	5Axis
0.0005c	0.0000c
3Axis	6Axis
0.0000c	0.0000c

WAIT 200 mS

END METHOD  
MAX POWER

[RANGE [mm, degree]]


Set the amplitude of each axis for NelderMead method.

Other items are the same as for Spiral, Raster, and Line alignment.

• [Input Setting] input

Set the interface for acquiring the measurement data.

Input items of [Input Setting] for GPIB, STR (serial), and TCP/IP

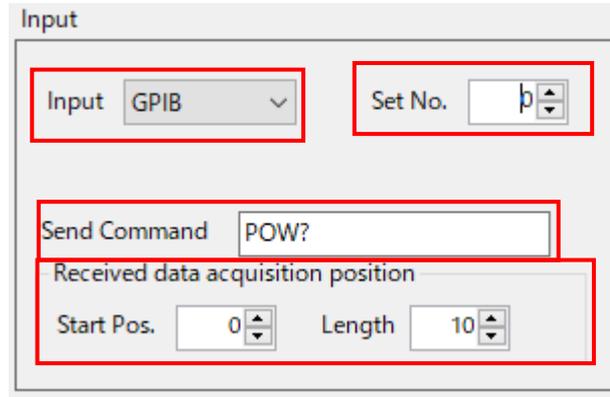

[input]

Select the interface (A/D, GPIB, STR (serial), TCP/IP) for acquiring the measurement data.


[Set No.]

Select the setting number for each interface.

Example: In the case of A/D

Subtract 1 from the "SET No." shown on the "A/D Set" screen to get the value of 0-19.

Example: A/D set screen

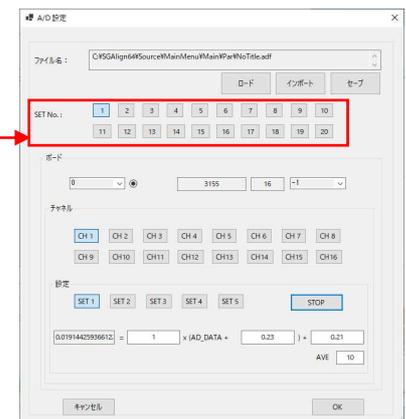

Example: In the case of GPIB

Subtract 1 from the "SET No." shown on the "GPIB Parameter" screen to get the value of 0-19

Example: In the case of STR (serial)

Subtract 1 from the "No." shown on the "Serial Communication Setting" screen to get the value of 0-4.

Example: In the case of TCP/IP

Subtract 1 from the "No." shown on the "TCP/IP Setting" screen (LAN COM) to get the value of 0-2.


Input items of [Input Setting] for A/D

[Averaging Count] (\*Available for A/D only)

Set the number of measurements for averaging.

When the number is set to be 0, averaging is not performed.

\*Depending on the device, it may not work due to the communication response.

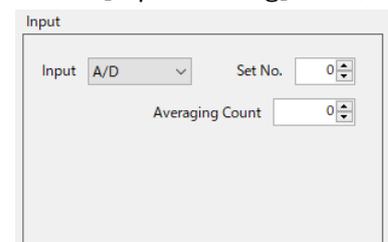

[Send Command](\*GPIB, STR(Serial), TCP/IP only)

Command for acquiring the power.

The command is sent to the destination using the device setting specified in “Set No.” on each communication device setting screen.

[Start Pos.] (\*GPIB, STR(Serial), TCP/IP only)

Sets the start position of the string, which is the received numeric data, in the received string.

The position of the first character in the received string is 0.

[Length] (\*GPIB, STR(Serial), TCP/IP only)

Sets the length of the received numerical data started from the [Start Pos.] in the received string.

- [Input Setting]input (\*NelderMead only)

The screenshot shows a software interface for 'Input' settings. At the top, there is a dropdown menu for 'Input' set to 'A/D', a 'Set No.' field with the value '0', and an 'Average' field with the value '10'. Below these is a section titled 'CONVERGENCE' which is enclosed in a red rectangular box. This section contains three fields: 'Threshold' with the value '100.000000', 'Improvement Count' with the value '10', and 'Iteration' with the value '50'. Each field has a small up/down arrow icon next to it.

[CONVERGENCE]

Threshold: in “%”. If the currently detected power is lower than the detected maximum power \* “Thread%”, the non-improvement count is increased by 1. Then it is compared with the following Improvement Count.

Improvement Count: If the most recently detected powers are continuously lower than the detected maximum power \* “Thread %”, and the number exceeds “Improvement Count”, the alignment will be stopped.

Iteration: Maximum number of times of alignment. If the number of times of alignment exceeds this value, alignment will be stopped regardless of whether or not the peak has been detected.

Other items are the same as for Spiral, Raster, and Line alignment.

• [Operation]

[Align Start] Start the selected alignment detection

At the same time, the measurement data is saved in the following folder.

Folder "C:¥Users¥[User Name]¥Documents¥SGALIGN¥data"  
 Format ".csv"

\* The file will be overwritten each time when a new detection is started.  
 Please rename if necessary.

• Saved Format

① In the case of two dimensional detection (SPIRAL, RASTER)

Save name: Alignment detection name  
 (e.g. Spiral.csv for SPIRAL alignment detection)

\*Below shows when opening the file in Excel.  
 The numerical data is actually separated by ",".

1 <sup>st</sup> Axis Detection Pitch (mm)	Axis_1	0.001	Axis_2	0.001	2 <sup>nd</sup> Axis Detection Pitch (mm)
	-37.4632	-37.4622	-37.4612	-37.4602	-37.4592
	-14.5019	157.6912	159.4794	167.9617	179.1794
	-14.5029	168.0654	183.4354	185.4151	193.8938
	-14.5039	178.5884	194.1817	208.9962	211.1971
1 <sup>st</sup> Axis Coordinate (mm)	-14.5049	189.0577	204.3704	218.9572	231.4823
	-14.5059	198.9388	214.4277	228.4801	240.3424
				250.5826	

← 2<sup>nd</sup> Axis Coordinate (mm)  
 ← Detected Data (Analog Value, etc.)

② In the case of one dimensional detection (1-3 Line)

Save name: "Axis\_1.csv" for 1LINE  
 "Axis\_1.csv" (1<sup>st</sup> axis) and for "Axis\_2.csv" (2<sup>nd</sup> axis) 2LINE

\*Below shows when opening the file in Excel.  
 The numerical data is actually separated by ",".

Coordinate (mm)	Axis_1	0.001
	-43.7553	-0.00259
	-43.7543	-0.00283
	-43.7533	-0.00273
	-43.7523	-0.00252
	-43.7513	-0.0024

← Detection Pitch (mm)  
 \*Axis\_2 for 2<sup>nd</sup> axis  
 ← Detected Data (Analog value, etc.)

[STOP] Stop the detection.

\*In the case of SPIRAL or PASTER, the operation does not stop until the detection along the currently operating side is completed.

\*The measurement results from the start of the measurement to the time when STOP is pressed are saved.


## 1 2 . Alignment Result Screen

Display the alignment result for various alignment method.

- [Alignment Result for Spiral]


- [Result File]

Display the saved .csv file name.

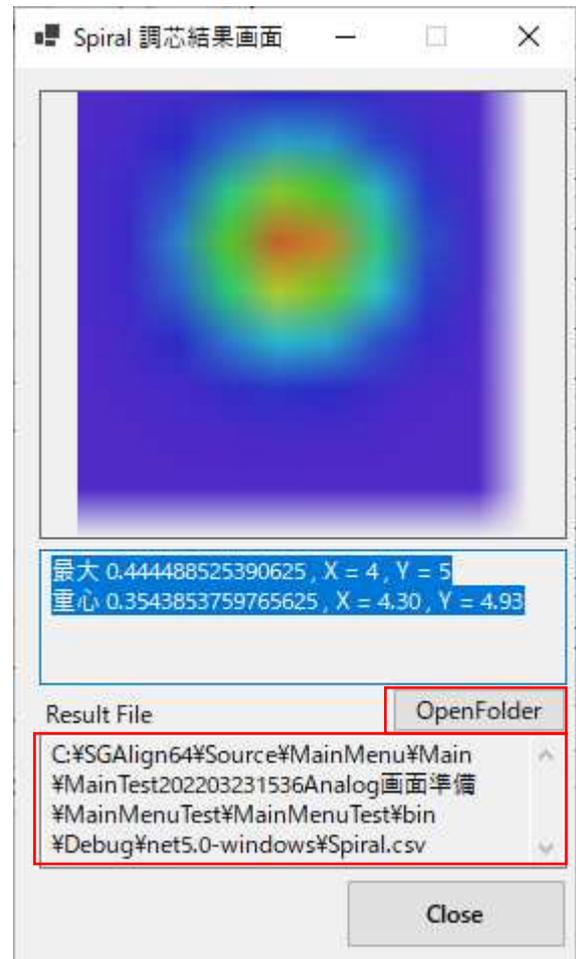


- [OpenFolder]Button


Click [OpenFolder] button to explore the folder which contains .csv alignment result file.

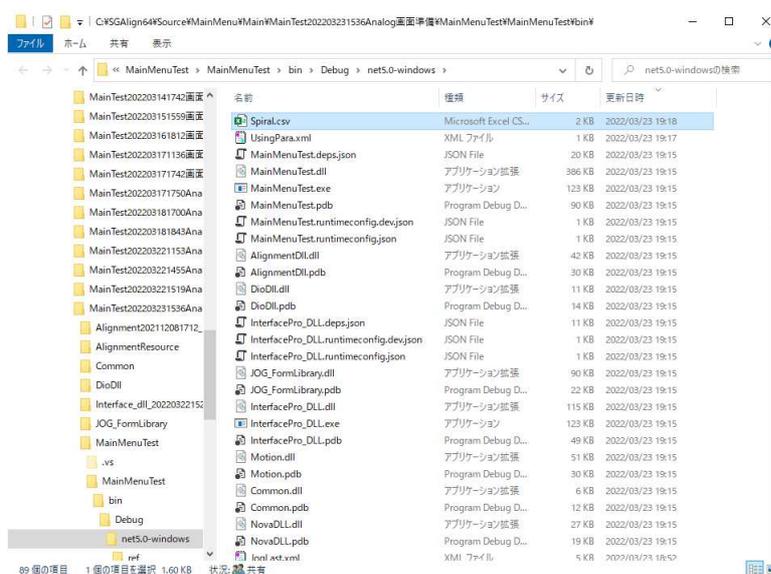


• [Alignment Result for Raster]

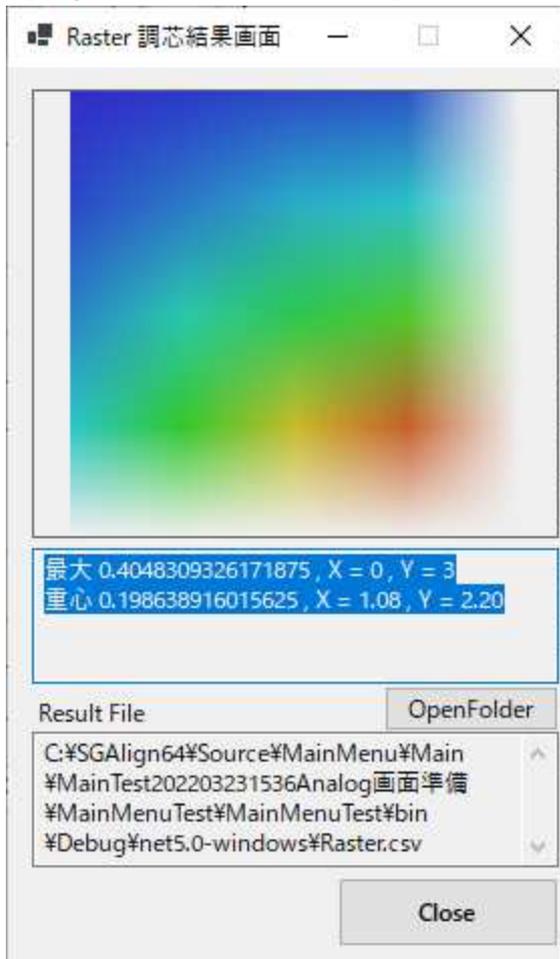

• [Alignment Result for 3Line]

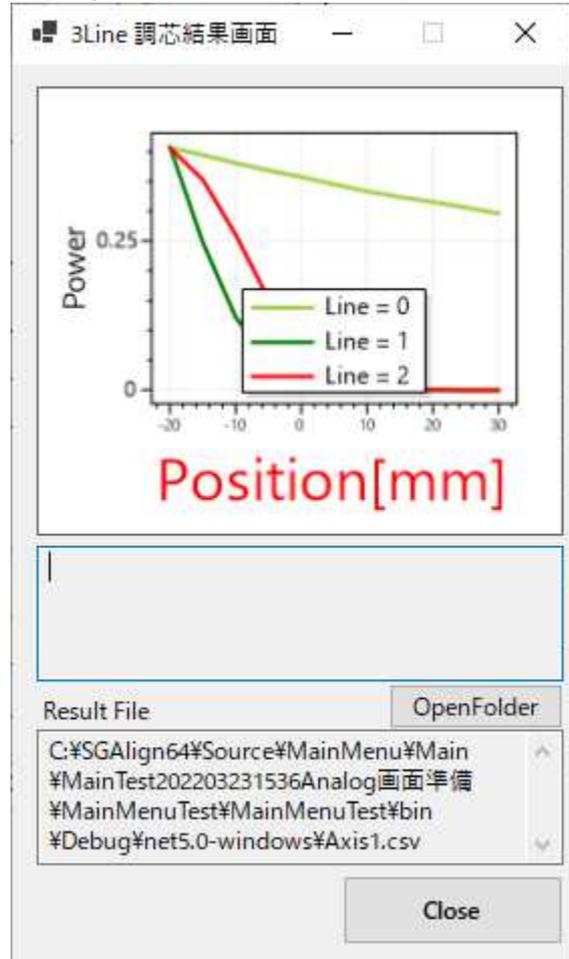


[Alignment Result for NelderMead]

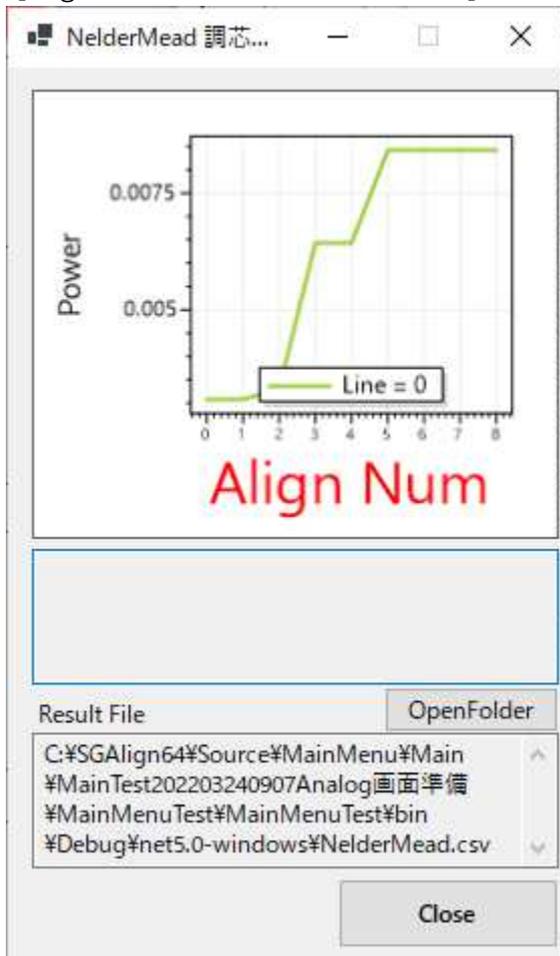

# 1 3 . Sequence

## 1 3 - 1 . Sequence Editing Screen

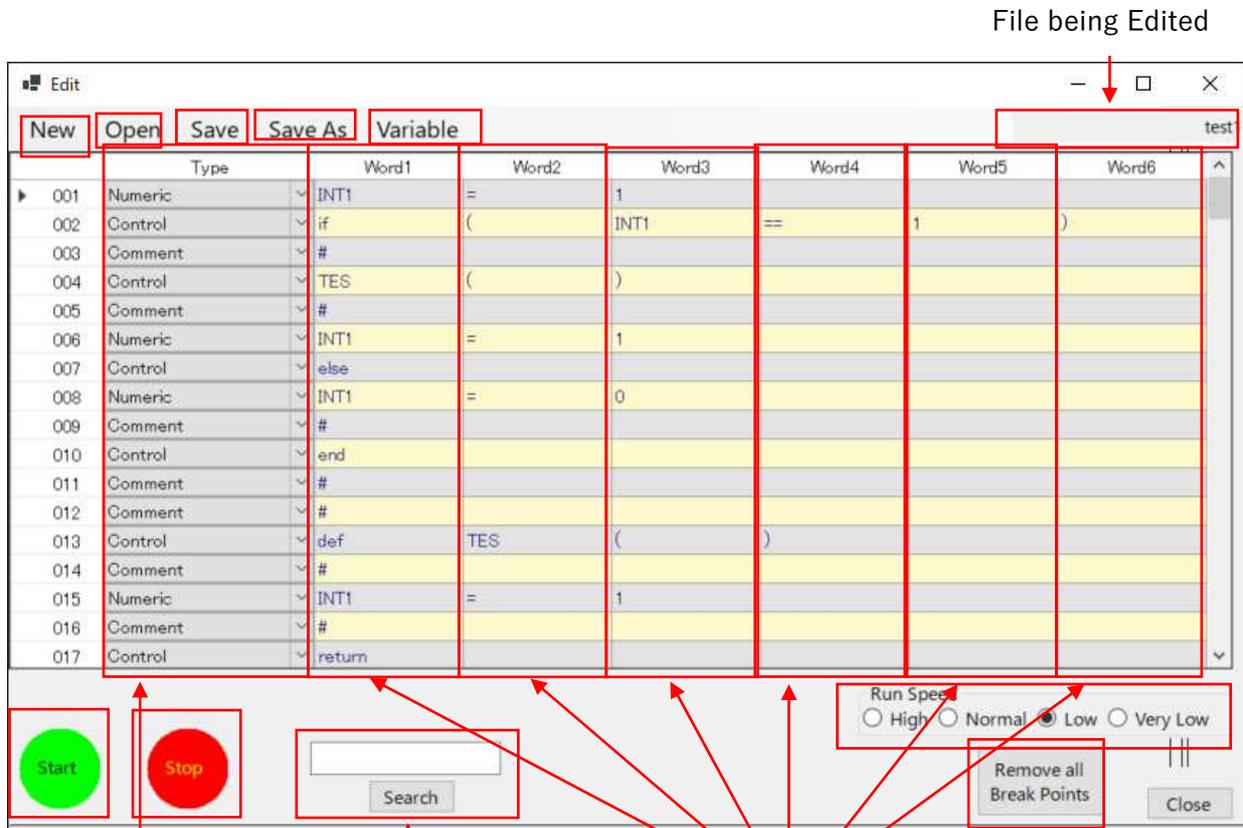


Calculation and Control Type

Search in Sequence

Operand Box

- [New]  
Completely clear the current sequence screen to create a new sequence.  
(File is not saved in this time)
- [Open]  
Open and display a sequence file.
- [Save]  
Overwrite the selected sequence file with the contents shown in the current sequence screen.
- [Save as]  
Save the contents shown in the current sequence screen to a new file.

- [Variable List]  
Display the variable editing screen  
-> 3-2
- [File being Edited]  
The file name of the currently edited/displayed sequence.
- [Calculation and Control Type]  
Select the process from the combo box.
- [Operand Box]  
Enter commands, operators, variables, values, etc.  
C# or Python syntax.  
Right-click to display input candidates.

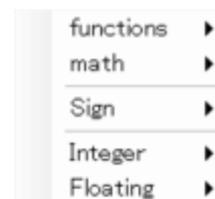

- [Start] Button  
Start the sequence in the order from the top.
- [Stop] Button  
Stop the currently running sequence.
- [Search in Sequence]  
Search the string entered into the search box in columns from Word1 to Word6 in the current sequence screen. Display the matched string or value in cell in red.
- [Run Speed]  
Change the execution speed of the sequence shown in the current screen.
  - [High] : High speed
  - [Normal] : Normal speed
  - [Low] : Low speed
  - [Very Low] : Very low speed

\*When executing the sequence by click [Start] button in main screen,  
the execution speed is faster than the [High] speed in sequence screen.
- [Remove all Break Point] Button  
Remove all break points in the sequence screen.

## 1 3 - 2 . Variable List Screen

Input the variables used in the sequence.

The screenshot shows a window titled "Variable" with a table and several buttons. Red arrows point to specific elements: "Variable Name" points to the first column, "Type" points to the second column, "Value" points to the third column, and "Note" points to the fourth column. Below the table, "Save" and "New" buttons are highlighted with red boxes. A "Search" button is also highlighted, along with a search input field. A "Close" button is at the bottom right.

Variable Name	Type	Value	Note
183 sStatus	String	1	
184 sStart_Time	String	Monday, February...	
185 sEnd_Time	String	Monday, February...	
186 sCycle_Time	String	31	
187 sModule_Tilt	String	0.0483625	
188 sHeight_Ave	String	5.522903747558594	
189 sHand_Height	String	27.451	
190 sMirror_Height	String	4.808805847167969	
191 sBench_Height	String	4.89173034667968...	
192 sDispencer_Shot	String	3	
193 sProgram_Revisi...	String	1.00	

- [Variable Name]

Input or modify the variable name.

Input in the last line to add new variable.

- [Type]

Select the type of the variable from the combo box.

- [Value]

Display the current value of the variable.

Change the current value when editing.

- [Note]

Input note about the variable. This does not affect the sequence.

- [Save] Button

Overwrite the variable list file with the current variable list.

Saved file path and name:

C:\Users\%[User Name]\Documents\OptoSigma\SGALIGN\Variable.json

- [New] Button

Clear the variable list for creating new one.

- [Search]


Enter the variable name in the textbox and click [Search] button.

If the variable exists in the current variable list, the list is scrolled, and the searched variable becomes highlighted in blue.


The search is the exact match search.

# 1 4 . Key Console

## 1 4 - 1 . Display the key console setting screen

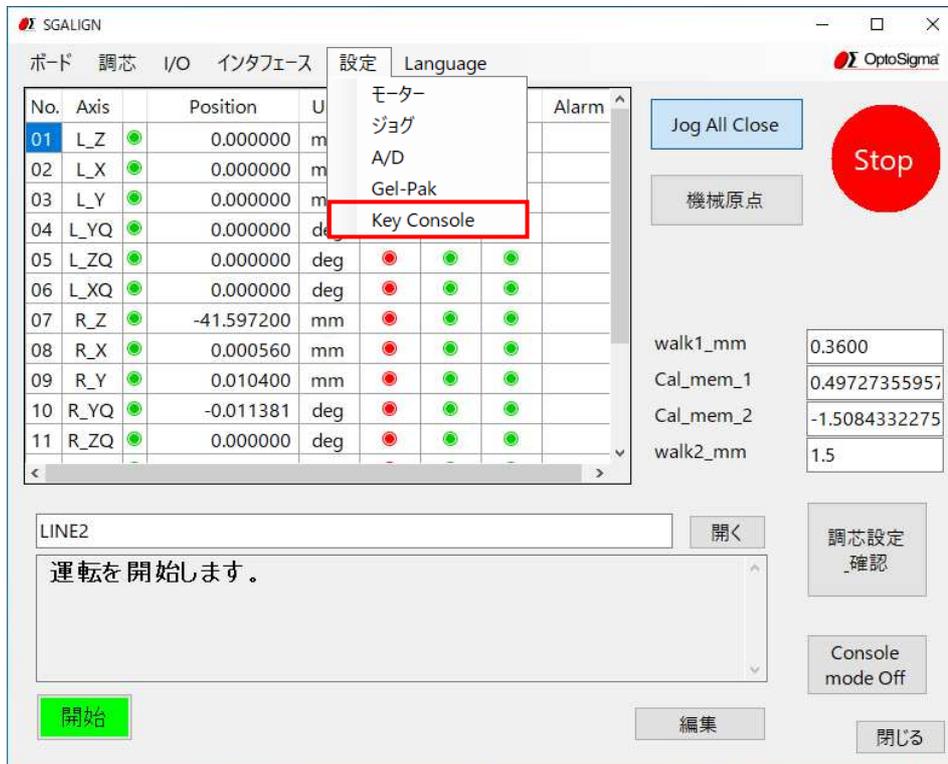

Click [Setting] - [Key Console] on main screen to display the key console screen.

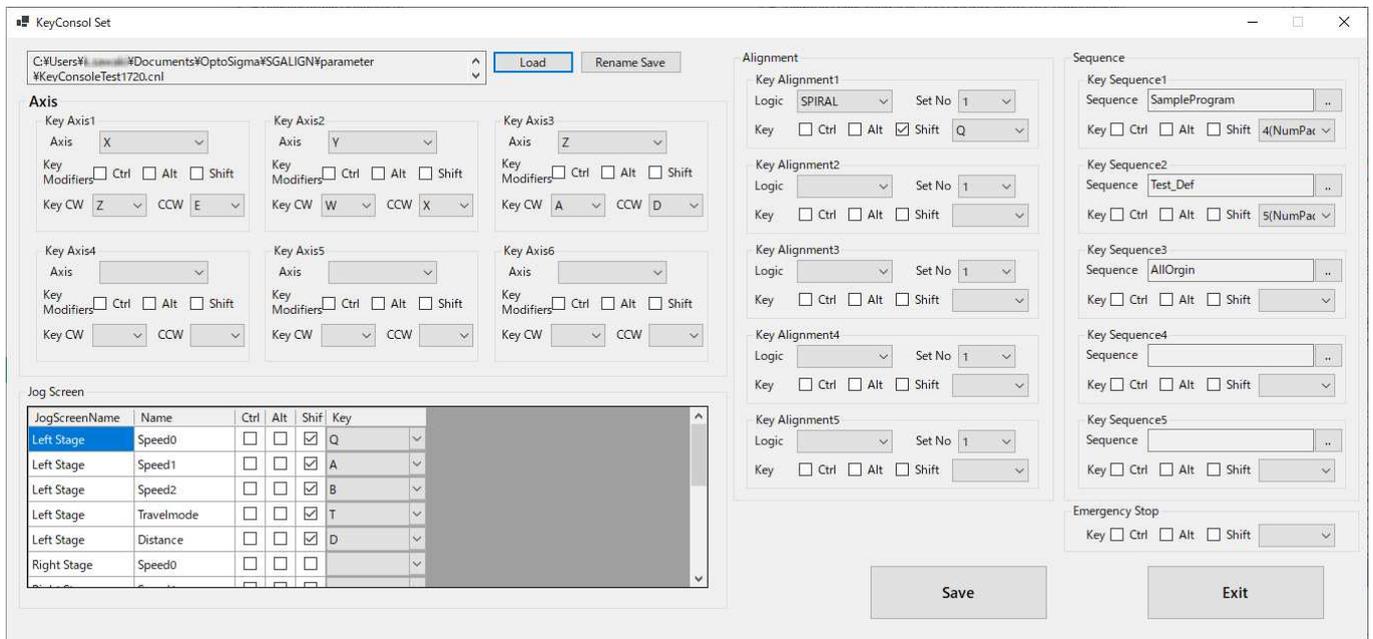

## 1 4 - 2 . Key Console Setting Screen

• [Left side of the key console setting screen]

The screenshot shows the 'KeyConsole Set' window. At the top, there is a file path: 'C:\Users\%# Documents\%OptoSigma\SGALIGN\parameter\%KeyConsoleTest1720.cnl'. Below this are 'Load' and 'Rename Save' buttons. The main area is divided into two sections: 'Axis' and 'Jog Screen'.

**Axis Section:** Contains six sub-panels for Key Axis1 through Key Axis6. Each panel includes a dropdown for the axis (e.g., X, Y, Z), checkboxes for modifiers (Ctrl, Alt, Shift), and dropdowns for clockwise (CW) and counter-clockwise (CCW) keys.

**Jog Screen Section:** Contains a table with columns: JogScreenName, Name, Ctrl, Alt, Shif, and Key.

JogScreenName	Name	Ctrl	Alt	Shif	Key
Left Stage	Speed0	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Q
Left Stage	Speed1	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	A
Left Stage	Speed2	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	B
Left Stage	Travelmode	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	T
Left Stage	Distance	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	D
Right Stage	Speed0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	

• [Right side of the key console setting screen]

The screenshot shows the right side of the 'KeyConsole Set' window, divided into two main sections: 'Alignment' and 'Sequence'.

**Alignment Section:** Contains five sub-panels for Key Alignment1 through Key Alignment5. Each panel includes a dropdown for logic (e.g., SPIRAL), a dropdown for Set No (e.g., 1), and a key selection dropdown with modifier checkboxes.

**Sequence Section:** Contains five sub-panels for Key Sequence1 through Key Sequence5. Each panel includes a dropdown for sequence (e.g., SampleProgram, Test\_Def, AllOrigin) and a key selection dropdown with modifier checkboxes.

At the bottom, there is an 'Emergency Stop' section with a key selection dropdown. Below this are two large buttons: 'Save' and 'Exit'.

• [File Management]


File name (.cni) for saving the key console setting value.

Load : Load the key console setting file (.cni file)

Rename Save : Save the key console setting to different file (.cni file)

• [Axis Operation Key Setting]

Specify the key for moving the axis in each direction. Up to 6 axes can be specified.

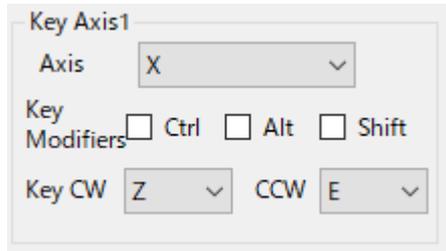


Axis : Select the axis which is operated by using the key. Only the existing axes are listed.

Key Modifiers: Check to allow in combination with Control, Alt, and Shift.

Key CW : Specify the CW direction key of the axis shown in [Axis]. Required for key operation.


Key CCW : Specify the CCW direction key of the axis shown in [Axis]. Required for key operation.

When pointing Key CW and Key CCW with mouse, tooltip appears.

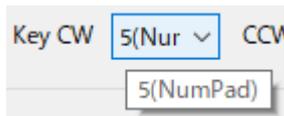

Keys in green can be specified for Key, Key CW, and Key CCW.

Keys in yellow can be specified for Key Modifiers.

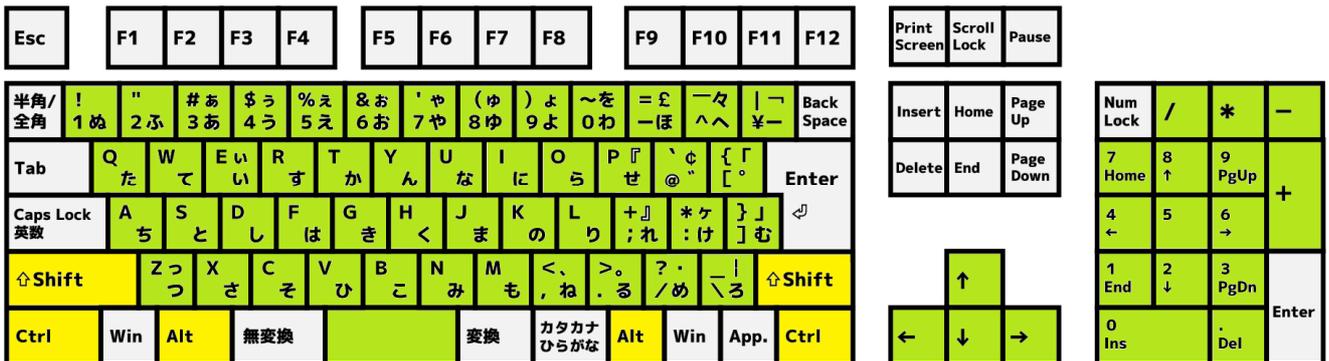

\*Please note that the keys in yellow can only be used in combination with that in green and cannot be used alone.

- [Set speed, operation mode, moving distance key in Jog Screen]  
Using the 3-step speed and 3-step movement distance set in the JOG operation screen, to specify keys for 3-step speed, key for movement distance switching, and key for movement mode switching.

JogScreenName	Name	Ctrl	Alt	Shif	Key
Left Stage	Speed0	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Q
Left Stage	Speed1	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	A
Left Stage	Speed2	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	B
Left Stage	Travelmode(※ 1)	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	T
Left Stage	Distance	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	D
Right Stage	Speed0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Right Stage	Speed1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Right Stage	Speed2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	

Items that can be assigned to keys in each JOG screen are Speed0, Speed1, Speed2, TravelMode switching, and Distance switching .

(For example) Left Stage

Speed0: 0.1000

Speed1: 2.0000

Speed2: 15.9000

TravelMode (※ 1): Jog, Relative, Absolute

Distance: 0.0000, 0.0050, 0.1000

※ 1: With key operation, Travelmode switches between Jog and Relative. Absolute cannot be switched to.

### Jog Screen

JogScreenName	Name	Ctrl	Alt	Shif	Key
Left Stage	Speed0	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Q
Left Stage	Speed1	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	A
Left Stage	Speed2	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	B
Left Stage	Travelmode	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	T
Left Stage	Distance	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	D
Right Stage	Speed0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Right Stage	Speed1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Right Stage	Speed2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	

JogScreenName : Display the JOG screen name and it cannot be changed.

Name : Display the name of the key operation and it cannot be changed.

Ctrl : Check to use "Control" key.

Alt : Check to use "Alt" key.


Shift : Check to use "Shift" key.

Key : Specify the key. It is necessary when using key operation.

When pointing the Key using mouse, the full key name appears in a tooltip.

• [Alignment Setting Key]


[Alignment Method] and [Setting Storage] No.1~No.20 set on the [Alignment Setting Screen] can be specified as key operations. Up to 5 alignment settings can be specified.

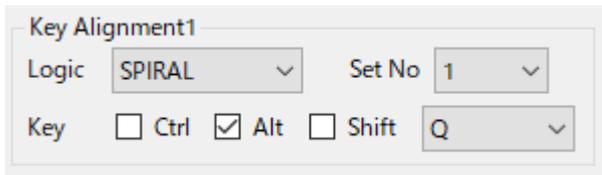

- Logic : Select the [ Alignment type] for key operation
- Set No : Specify [Setting Storage] No.1~No.20 for selected [Logic]
- Ctrl : Check to use "Control" key.
- Alt : Check to use "Alt" key.
- Shift : Check to use "Shift" key.
- Key : Specify the key. It is necessary when using key operation.


When pointing the Key using mouse, the full key name appears in a tooltip.

(Example: Alignment Setting Screen)

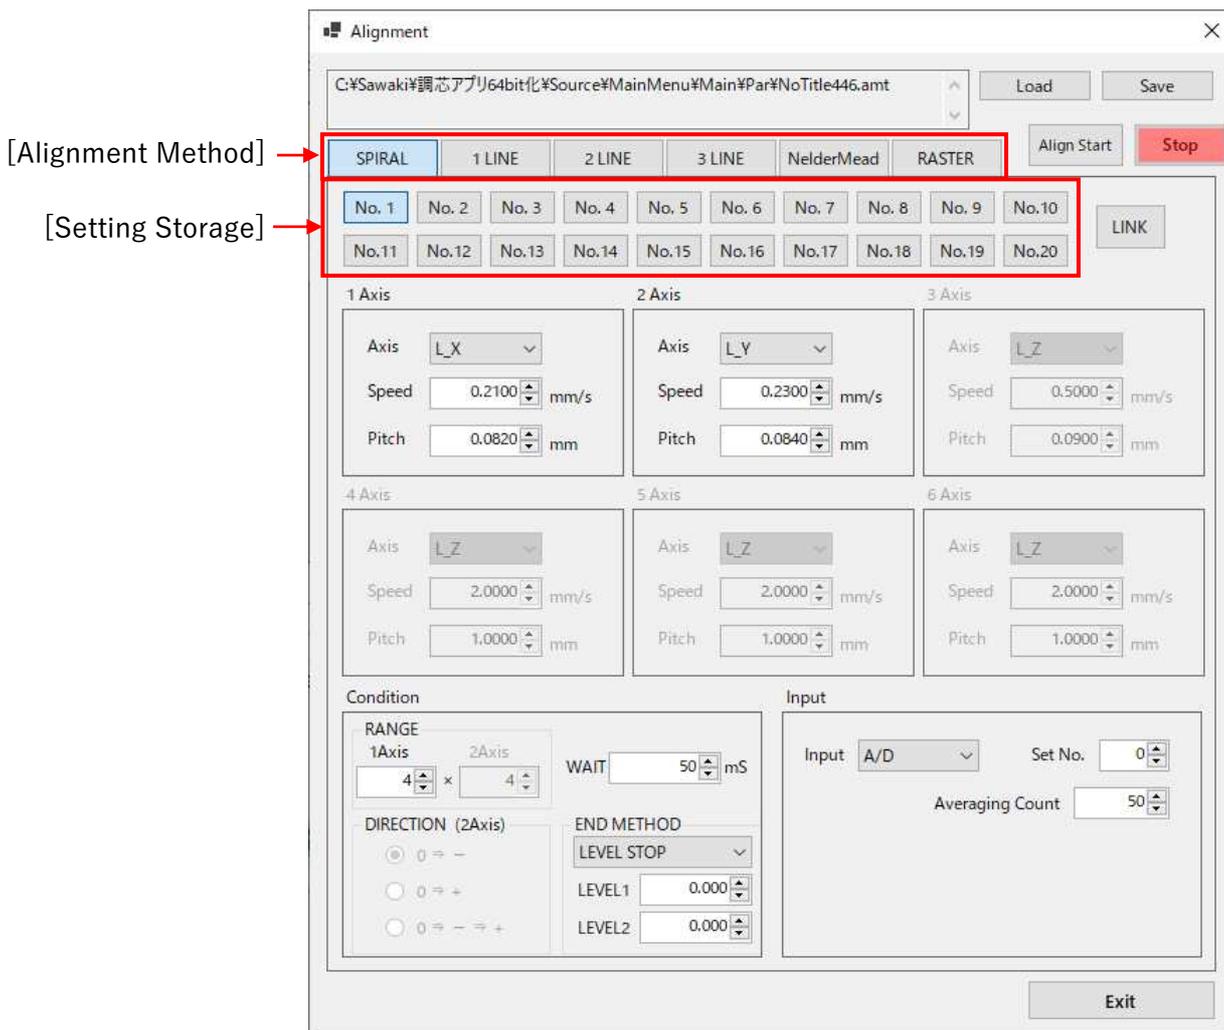

• [Sequence Key]

A sequence file that describes sequence actions can be specified as a key operation. Up to 5 can be specified.

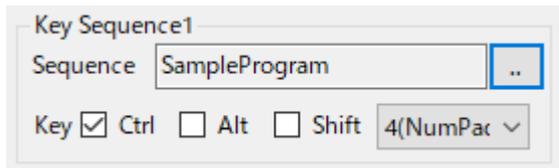

Sequence : Display \*.json sequence file for key operation.

It cannot be directly input.



Button : Click to display \*.json sequence files in the folder

C:¥Users¥[User Name]¥Documents¥OPTOSIGMA¥SGALIGN¥sequence

Select \*.json sequence file from here.

\*Only the sequence file in the following folder can be selected.

C:¥Users¥[User Name]¥Documents¥OPTOSIGMA¥SGALIGN¥sequence

Ctrl : Check to use "Control" key.

Alt : Check to use "Alt" key.

Shift : Check to use "Shift" key.


Key : Specify the key. It is necessary when using key operation.

When pointing the Key using mouse, the full key name appears in a tooltip.

• [Emergency Stop Key]

Set key for emergency stop.

Immediately stop all axis motion, all alignment and all sequence.

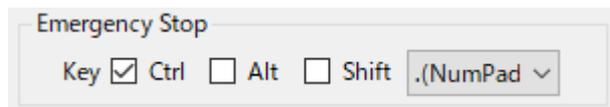

Ctrl : Check to use "Control" key.

Alt : Check to use "Alt" key.

Shift : Check to use "Shift" key.

Key : Specify the key. It is necessary when using key operation.

When pointing the Key using mouse, the full key name appears in a tooltip.

• [Save Button]


Click to save key console setting to the ".cnl" file shown in [File Management].

• [Exit Button]

Close the key console setting screen.

### 1 4 - 3 . Switching to console key operation mode

Key operations are possible only when the main screen is active.

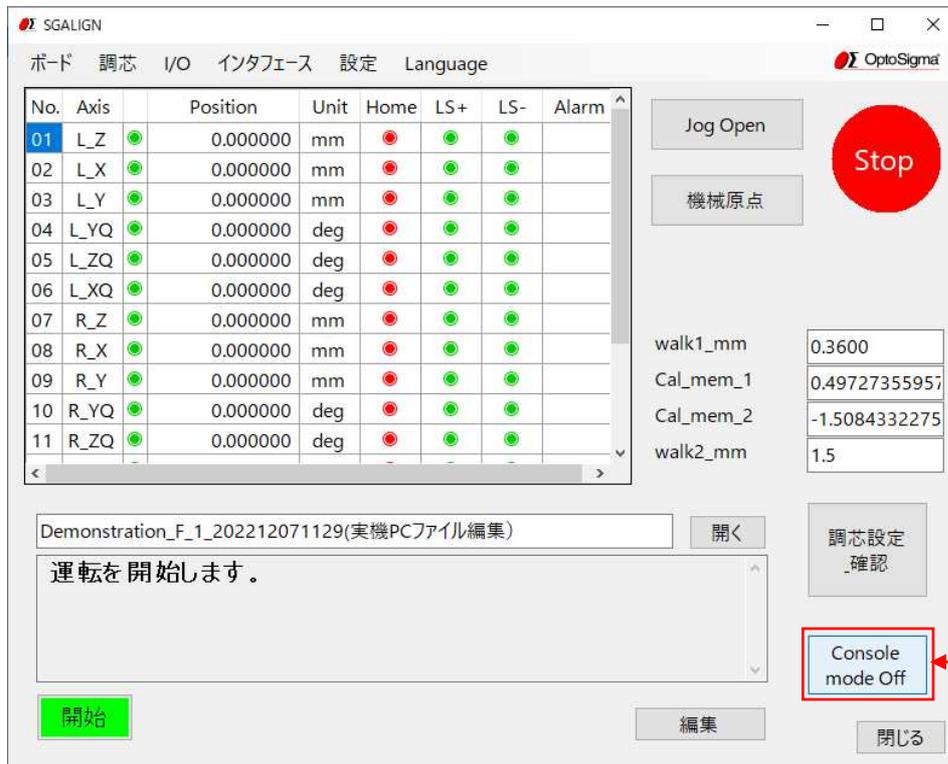

ON/OFF switching button for console key operation

Above shows status when console key operation mode is OFF.

Click [ON/OFF switching button for console key operation].



ON/OFF switching button for console key operation

console key operation mode becomes ON.

When the console key operation mode is ON, screen in pink is for attention.

The text of [ON/OFF switching button for console key operation] becomes [Console mode On].

Click [ON/OFF switching button for console key operation] again to return to console key operation mode OFF status.

No.	Axis	Position	Unit	Home	LS+	LS-	Alarm
01	L_Z	0.000000	mm	●	●	●	
02	L_X	0.000000	mm	●	●	●	
03	L_Y	0.000000	mm	●	●	●	
04	L_YQ	0.000000	deg	●	●	●	
05	L_ZQ	0.000000	deg	●	●	●	
06	L_XQ	0.000000	deg	●	●	●	
07	R_Z	0.000000	mm	●	●	●	
08	R_X	0.000000	mm	●	●	●	
09	R_Y	0.000000	mm	●	●	●	
10	R_YQ	0.000000	deg	●	●	●	
11	R_ZQ	0.000000	deg	●	●	●	

walk1\_mm: 0.3600  
Cal\_mem\_1: 0.49727355957  
Cal\_mem\_2: -1.5084332275  
walk2\_mm: 1.5

Console mode Off

ON/OFF switching  
button for console key  
operation

## 1 4 - 4 . Operation example using console keys

[Movement mode switching]

As an example, change movement mode of the Left Stage to relative movement.

- ① Switch console mode to be On and display the pink screen.
- ② The Travelmode of the Left Stage on the setting screen is confirmed to be [Shift + T].
- ③ Active the main screen in pink by clicking it or using other method, and press [Shift + T].

### Main Screen


The main screen displays a table of axis positions and control buttons. The 'Console mode On' button is highlighted with a red box and a circled '1'. The 'Stop' button is a large red circle with a white 'S' and is circled in red. A message box at the bottom of the screen contains the text: 'Left Stageの移動モードを相対移動に変更しました。' (Left Stage movement mode changed to relative movement). A circled '3' is placed below this message.

Console key setting screen

JogScreenName	Name	Ctrl	Alt	Shif	Key
Left Stage	Speed0	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Q
Left Stage	Speed1	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	A
Left Stage	Speed2	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	B
Left Stage	Travelmode	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	T
Left Stage	Distance	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	D


ON/OFF switching button for console key operation

To confirm, press the Jog Open button to try to display the JOG screen.

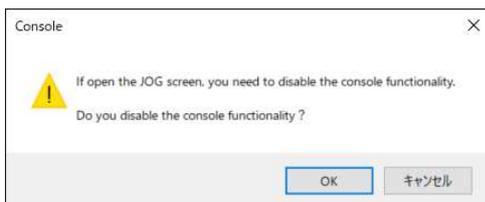

The message box shows that to open the JOG screen, Console function must be disabled. Then click OK. (Explanation will be omitted from the next time)

## Left Stage JOG Screen

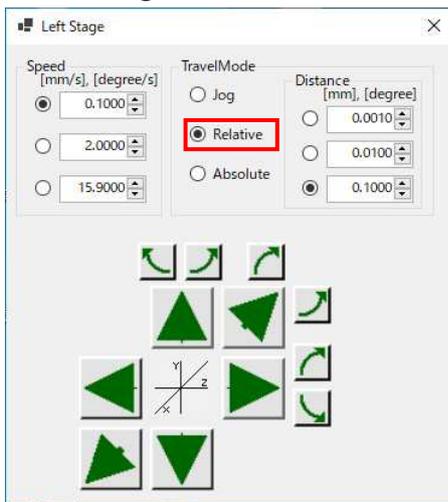

Travelmode on the JOG screen of the Left Stage can be confirmed to be Relative.


With console key specification, each time after specified key is pressed, Travelmode changes from JOG → Relative → JOG → ... repeatedly.

It cannot be changed to Absolutemode.

[Relative moving distance switching]

- ① Switch console mode to be On and display the pink screen.
- ② The Distance switching of the Left Stage on the setting screen is confirmed to be [Shift + D].
- ③ Active the main screen in pink by clicking it or using other method, and press [Shift + T].


## Main Screen

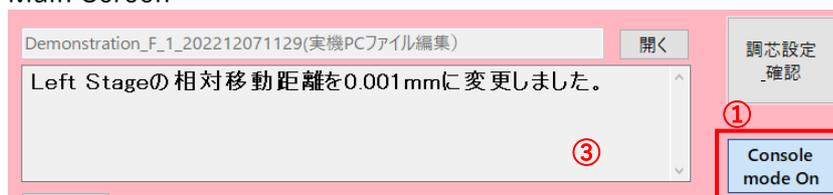

## Console key setting screen

JogScreenName	Name	Ctrl	Alt	Shif	Key
Left Stage	Speed0	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Q
Left Stage	Speed1	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	A
Left Stage	Speed2	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	B
Left Stage	Travelmode	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	T
Left Stage	Distance	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	D

## Left Stage JOG Screen

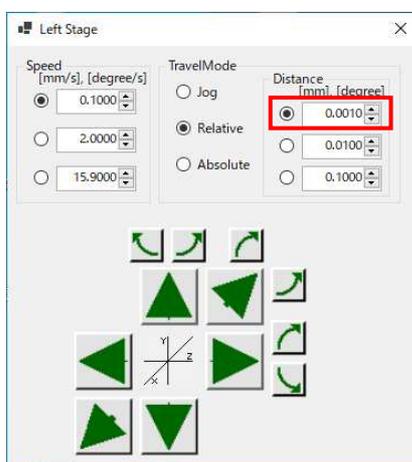


Relative distance on JOG screen of left stage can be confirmed to be 0.001 m m.

### [Speed Setting]

- ① Switch console mode to be On and display the pink screen.
- ② The Speed1 specification of the Left Stage on the setting screen is confirmed to be [Shift + A].
- ③ Active the main screen in pink by clicking it or using other method, and press [Shift + A].


### Main Screen

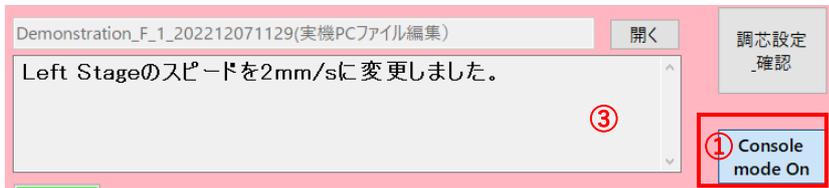

### Console key setting screen

JogScreenName	Name	Ctrl	Alt	Shif	Key
Left Stage	Speed0	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Q
Left Stage	Speed1	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	A
Left Stage	Speed2	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	B
Left Stage	Travelmode	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	T
Left Stage	Distance	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	D

### Left Stage JOG Screen

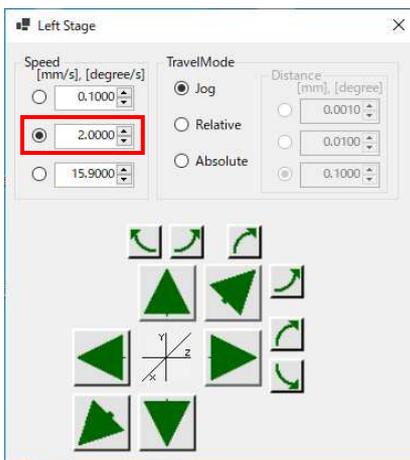


Speed on left stage JOG screen can be confirmed to be 2mm/s.

Above the operation is also valid for Speed0 key and Speed2 key setting.


### [Axis Movement]

- ① Switch console mode to be On and display the pink screen.
- ② Set Travelmode to the desired status (Relative or JOG). (See previous page)
- ③ On the setting screen, [Z] is used to move L\_X axis in the + direction.
- ④ Active the main screen in pink by clicking it or using other method, and press [Z].
- ⑤ Once the movement is completed, the message "Completed" will be displayed after "...".


#### Main screen when executing relative movement

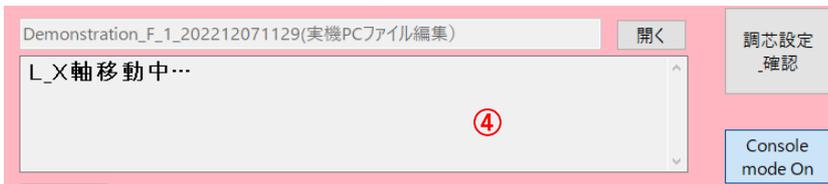


#### Console key setting screen

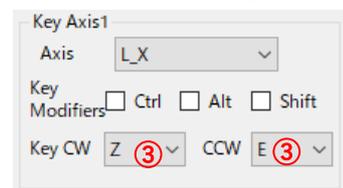


#### Main screen when executing JOG movement

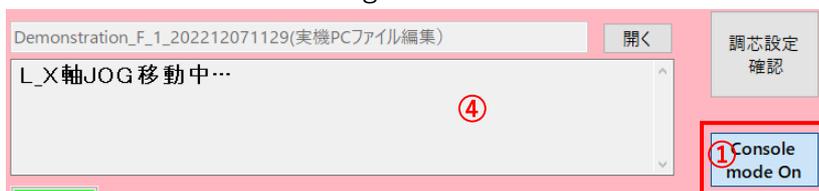

#### Main screen after completing relative movement


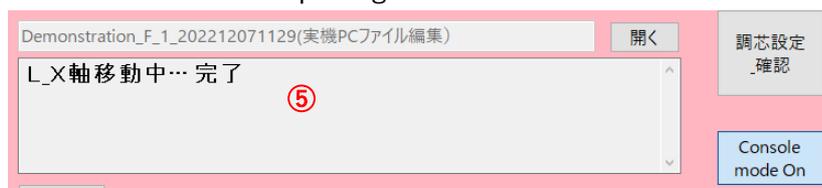


#### Main screen after completing JOG movement

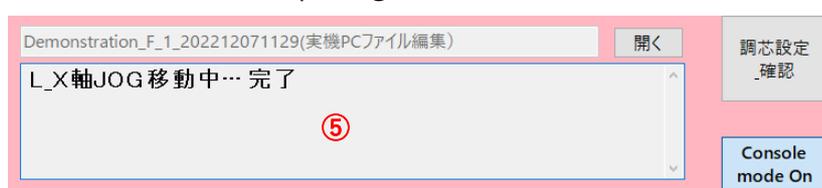



### [Alignment Operation]

- ① Switch console mode to be On and display the pink screen.
- ② On the setting screen, Key Alignment1 is SPIRAL alignment No.1. The console key is [Alt + Q].
- ③ Active the main screen in pink by clicking it or using other method, and press [Alt + Q].
- ④ Executing the alignment. To stop during the alignment, click STOP button on the screen, or press Emergency Stop key specified on the console key setting screen.

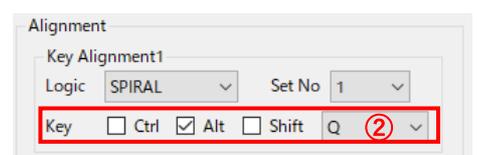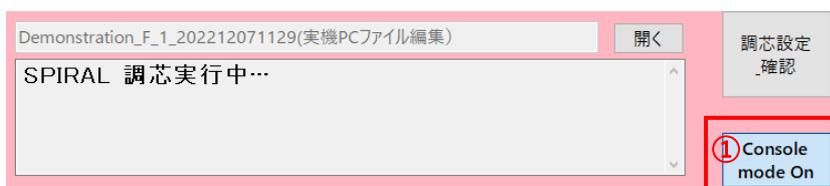



### [Sequence Operation]

- ① Switch console mode to be On and display the pink screen.
- ② On the setting screen, the sequence file of Key Sequence3 is "Demonstration\_F\_1202212071129~~". The console key is [Ctrl + 1(NumPad)].
- ③ Active the main screen in pink by clicking it or using other method, and press [Ctrl + 1(NumPad)].
- ④ The sequence name is changed to the specified sequence file name and the sequence is executed. To stop during the execution, click STOP button on the screen, or press Emergency Stop key specified on the console key setting screen.

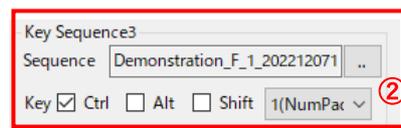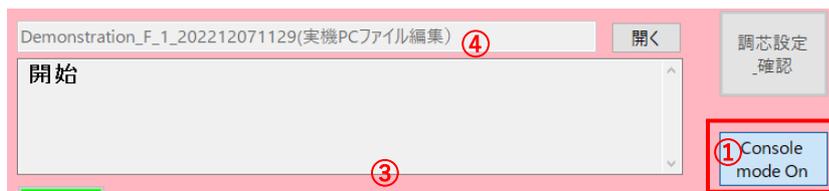

### [Emergency Stop]

- ① Switch console mode to be On and display the pink screen.
- ② On the setting screen, the console key of Emergency Stop is [Ctrl + 0(NumPad)].
- ③ Active the main screen in pink by clicking it or using other method, and press [Ctrl + 0(NumPad)].
- ④ "All axes are stopped" is displayed. Pressing stop key can stop axis, alignment and sequence.

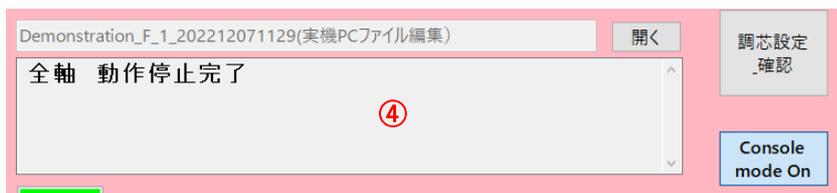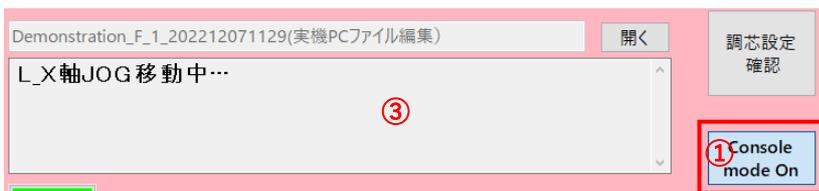

## 1 4 - 5 . Usable keys for console key operation

For console key operation, the keys in green can be used individually or in combination with keys in yellow.

Esc	F1	F2	F3	F4	F5	F6	F7	F8	F9	F10	F11	F12	Print Screen	Scroll Lock	Pause	
半角/全角 ! 1 ぬ	" 2 ふ	# あ 3 あ	\$ う 4 う	% え 5 え	& お 6 お	' や 7 や	( ゆ 8 ゆ	) よ 9 よ	~ を 0 わ	= ⑄ ーぼ	一々 へへ	ー ー	Back Space	Insert	Home	Page Up
Tab	Q た	W て	E い	R す	T か	Y ん	U な	I に	O ら	P 『せ	` ⑆	{ 『	Enter	Delete	End	Page Down
Caps Lock 英数	A ち	S と	D し	F は	G き	H く	J ま	K の	L り	+ 』	* ケ	} 』	Enter			
⇧ Shift	Z っ	X さ	C そ	V ひ	B こ	N み	M も	<、	>。	?・	／め	⇧ Shift				
Ctrl	Win	Alt	無変換		変換	カタカナ ひらがな	Alt	Win	App.	Ctrl						

Num Lock	/	*	—
7 Home	8 ↑	9 PgUp	+
4 ←	5	6 →	
1 End	2 ↓	3 PgDn	Enter
0 Ins	.	Del	

↑
← ↓ →

\*The key in yellow can only be used in combination with the keys in green. They cannot be used individually.

(NumPad) key is the numeric keypad on the right side of the keyboard shown in the above.

When selecting a key, [Numeric key] is the main key on the left, and [Number(NumPad)] key is the numeric key on the right. They are different.

[Number(NumPad)] key cannot be used for some PCs such as laptops without the numeric keypad.

The recommended keyboard layout、

- Japanese 106 keyboard
- Japanese 108/109 keyboard
- Japanese 112 keyboard

## 1 5 . How to start (From power on to sequence start)


- ① Power on the PC and then the 8-axis driver box.
- ② Double click the following icon to start the alignment software.



SGALIGN

- ③ Once the main screen appeared, click [Machine Origin].

\*Please always do mechanical origin after restarting driver box and alignment software. Otherwise, repeatability cannot be achieved, and mechanical interference may happen to damage the setup.

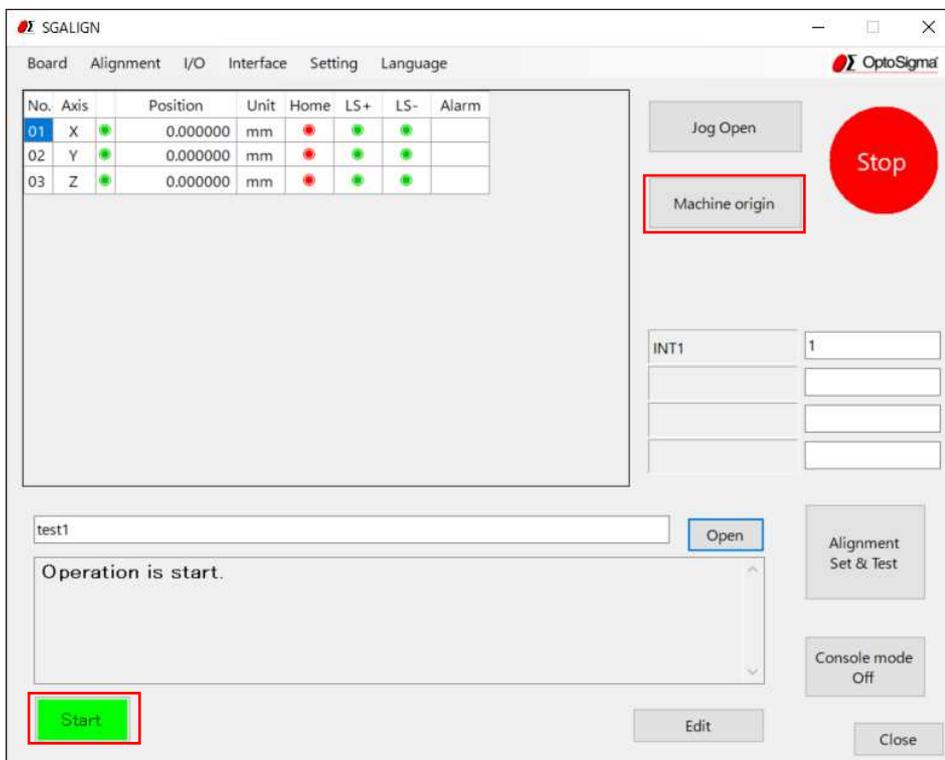

- ④ Once the machine origin is finished, please press [Start] button.
- ⑤ Once the operation is finished, please double check that the sequence program has been stopped. Then please click [Close] button.  
\*It might take time until the end screen appears because the data needs to be saved.
- ⑥ One the software is finished, please power off all devices.  
It is recommended to power off the devices in the reverse sequence of startup.